



N.TOP

**Wireless Access Point
Quick Installation Guide**

Support

You can download the complete guides and supporting programs from <http://www.airlive.com/product/n.top/download>, or scan the QR code here.



Please consult with the FAQs <http://www.airlive.com/product/n.top/faq> before writing to OvisLink Tech Support Team for further assistance




For any other question, please read the user manual in the CD or mail to tech@airlive.com for technical support.

N.TOP Package Contents

Please check the package contents and contact your distributor if any part is missing.



N.TOP

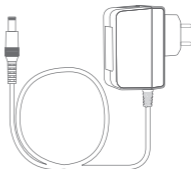

5V DC adapter



Quick Installation Guide



User Manual CD

I/O Interface




Button Reset / WPS

Reset the router to factory default settings (clear all settings) or start WPS function.

Reset: Press this button and hold for 10 seconds to restore all settings to factory defaults.

WPS: Press this button for less than 5 seconds to start WPS function.

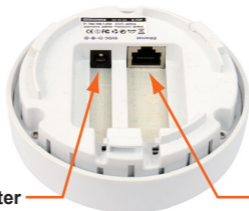


Power Adapter
Connector

LAN Port,
PoE Port

01 N.TOP Installation

1. Screw the bottom case into the wall.

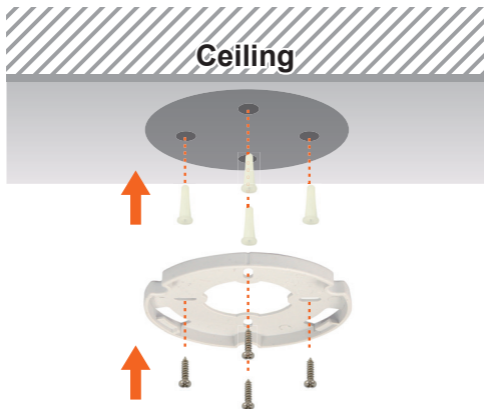


02 N.TOP Installation

2. There are two ways to power up N.TOP

(1) Connect N.TOP to 802.3at/af PoE switch via RJ45 Cable



(2) Connect the 5V/1A adapter to power up N.TOP

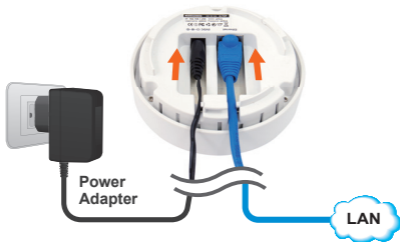


03 N.TOP Installation

3. Put the case screws back.



04 Connect N.TOP to Network


- Connect N.TOP to the LAN port of the switch.
- Connect switch to the LAN port of the router.
- Connect the PC/NB to the LAN port of the switch.

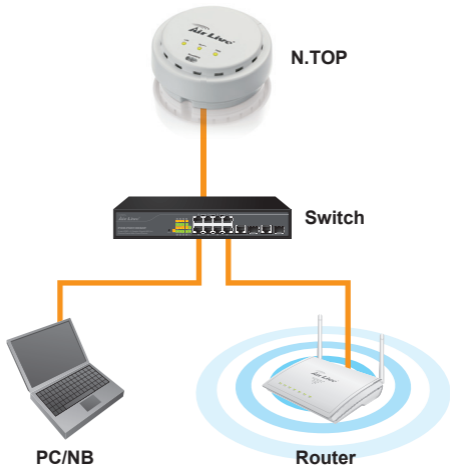

05 Set up the Network Environment

The default IP address of N.TOP is 192.168.1.254. Please set your PC/NB to the same subnet

 Enter the N.TOP IP address into browser to visit the N.TOP UI



The default username/password is **admin/airlive**



AirLive

Central Wireless

Management N.TOP
via AirLive Central Wireless

Support

You can download the AirLive Central Wireless from

<<http://www.airlive.com/product/n.top/download>>, or scan the QR code here.



For any other question, please read the user manual in the CD or mail to tech@airlive.com for technical support.

AirLive Central Wireless Installation

1. Please click the AirLive Central Wireless Setup file. The software will install automatically and click the AirLive Central Wireless short cut to start the program



AirLive Central Wireless Installation

2. Log-in AirLive Central Wireless Program.
Default username and password is **admin /
airlive**




AirLive Central Wireless Installation

3. After Log-in, the utility will start to scan N.TOP

, or you can click  to scan N.TOP.

Then click  to add the N.TOP into

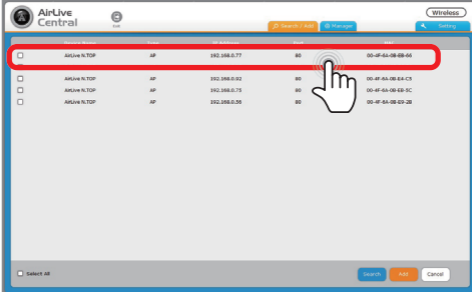


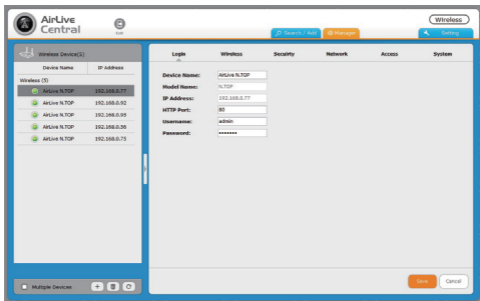
The screenshot shows the AirLive Central interface for wireless installation. At the top, there are navigation buttons for "Search / Add" and "Manage". A table lists discovered devices:

Device Name	Type	IP Address	Port	MAC
<input type="checkbox"/> AirLive N.TOP	AP	192.168.0.77	80	00-4F-6A-08-68-65
<input type="checkbox"/> AirLive N.TOP	AP	192.168.0.92	80	00-4F-6A-08-E4-C5
<input type="checkbox"/> AirLive N.TOP	AP	192.168.0.75	80	00-4F-6A-08-6B-5C
<input type="checkbox"/> AirLive N.TOP	AP	192.168.0.58	80	00-4F-6A-08-62-28

A red circle highlights the first row, and a hand icon points to the MAC address field. At the bottom, there is a "Select All" checkbox and buttons for "Search", "Add", and "Cancel".

AirLive Central Wireless Installation

4. Click the  tag which will list the N.TOPs which you add in



The screenshot shows the AirLive Central web interface. The top navigation bar includes the "AirLive Central" logo, a "Wireless" tab, and buttons for "Search / Add" and "Manage". Below the navigation bar, there are tabs for "Login", "Wireless", "Security", "Network", "Access", and "System".

The "Wireless" tab is active, displaying a table of wireless devices and a configuration form.

Device Name	IP Address
AirLive N.TOP	192.168.0.77
AirLive N.TOP	192.168.0.92
AirLive N.TOP	192.168.0.95
AirLive N.TOP	192.168.0.96
AirLive N.TOP	192.168.0.75


The configuration form on the right includes the following fields:


- Device Name: AirLive N.TOP
- Model Name: N.TOP
- IP Address: 192.168.0.77
- HTTP Port: 80
- Username: admin
- Password: *****

At the bottom of the interface, there is a "Multiple Devices" checkbox and a "Save" button.

AirLive Central Wireless Installation

5. Select the N.TOP which you want to manage, then you can change the SSID, channel, access address and system information.

Click  to save the setting

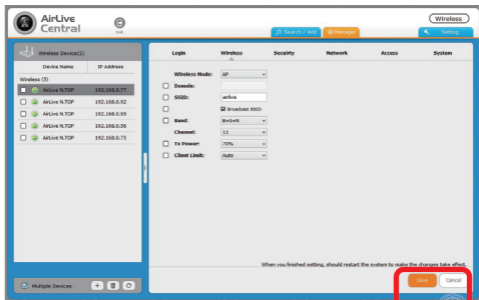

The screenshot displays the AirLive Central management console. On the left, a table lists wireless devices:

Device Name	IP Address
AirLive N.TOP	192.168.0.77
AirLive N.TOP	192.168.0.92
AirLive N.TOP	192.168.0.95
AirLive N.TOP	192.168.0.90
AirLive N.TOP	192.168.0.75

The right pane shows the configuration for the selected device, with tabs for Login, Wireless, Security, Network, Access, and System. The Wireless tab is active, showing settings for Wireless Mode (AP), Default, SSID (airlive), Broadcast SSID (checked), Band (802.11n), Channel (11), Tx Power (70%), and Client Limit (Auto). At the bottom right, a red box highlights the 'Save' button, with a hand icon pointing to it. A note at the bottom of the configuration pane reads: "When you finished setting, should restart the system to make the changes take effect."

AirLive Central Wireless Installation

6. You can change multiple N.TOPs together, tick

the **Multiple Devices** , select the

N.TOPs. Then tick the item you want to change.

You also can upgrade firmware for multiple N.TOPs in system page.

The screenshot shows the AirLive Central web interface. On the left, there is a table of wireless devices:

Device Name	IP Address
AirLive N.TOP	192.168.0.77
AirLive N.TOP	192.168.0.92
AirLive N.TOP	192.168.0.95
AirLive N.TOP	192.168.0.98
AirLive N.TOP	192.168.0.75

 
Below the table, the 'Multiple Devices' checkbox is highlighted with a red box and a hand icon. The main configuration area on the right shows the following settings:


- Wireless Mode: AP
- Disable:
- SSID: airlive
- Broadcast SSID:
- Band: 802.11n
- Channel: 11
- Tx Power: 70%
- Client Limit: Auto

At the bottom right, there are 'Save' and 'Cancel' buttons. A note at the bottom of the configuration area reads: "When you finished setting, should restart the system to make the changes take effect."

AirLive Central Wireless Installation

7. The setting will take effect after device is

reboot. Click  button in the “System”

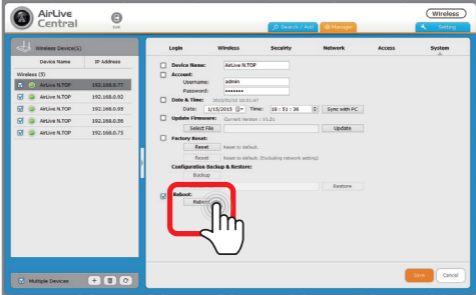

The screenshot shows the AirLive Central management interface. On the left, a table lists wireless devices:

Device Name	IP Address
AirLive N.TOP	192.168.0.77
AirLive N.TOP	192.168.0.92
AirLive N.TOP	192.168.0.95
AirLive N.TOP	192.168.0.96
AirLive N.TOP	192.168.0.75

The main configuration area is under the 'System' tab. The 'Reboot' option is checked, and the 'Reboot' button is highlighted with a red box and a hand cursor. Other options include 'Device Name', 'Account', 'Date & Time', 'Update Firmware', and 'Factory Reset'.