



## **SD-104**

Dimmer Wall Switch

## **User Manual**



[www.airlive.com](http://www.airlive.com)



## Copyright & Disclaimer

No part of this publication may be reproduced in any form or by any means, whether electronic, mechanical, photocopying, or recording without the written consent of OvisLink Corp.

OvisLink Corp. has made the best effort to ensure the accuracy of the information in this user's guide. However, we are not liable for the inaccuracies or errors in this guide. Please use with caution. All information is subject to change without notice

This product contains some codes from GPL. In compliance with GPL agreement, AirLive will publish the GPL codes on our website. Please go to [www.airlive.com](http://www.airlive.com) and go to the "Support->GPL" menu to download source code.

All Trademarks are properties of their respective holders.



## FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## Disposal



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



## Table of Contents

<b>1. Overview.....</b>	<b>2</b>
1.1 Adding to Z-Wave™ Network .....	3
1.2 LED Indication .....	4
1.3 Choosing a Suitable Location .....	4
1.4 Installation and Basic Operation .....	5
1.5 Association and Parameter .....	7
1.6 Specifications .....	9

# 1

## Overview



The SD-104, is a Z-Wave plus compliant Z-Wave Dimmer Switch to replace your current light Dimmer with a Z-Wave included one. The Z-Wave command is translated to a Dimming command. The wall mounted Dimmer is a component of the lighting control system. This wall mounted Dimmer is designed to work with other Z-Wave enabled devices. Z-Wave nodes of other types can be added to the system and act as repeaters if they support this function of repeating the signal received to other modules in the system. As part of a Z-Wave network, this switch will also act as a wireless repeater to insure that commands intended for another device in the network are received. This is useful when the device would otherwise be out of the radio range of the Z-Wave controller. There are no field repairable assemblies on this unit. If service was needed, the unit must be returned where purchased. This product can be included and operated in any Z-Wave™ network with other Z-Wave™ certified devices from other manufacturers and/or other applications. All non-battery operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network.

The device adopts the Z-Wave™ 500 series chip, when your Z-Wave™ network system is all made by Z-Wave™ 500 series devices. The network system will have the advantages.

## 1.1 Adding to Z-Wave™ Network

Note: This switch must be “Included in the Network” where it will be permanently installed. The proper operation of the SD-104 in the mesh network is dependent on knowing its location with respect to other nodes. You cannot “test bench” configure this switch and then install it.

First time adding, When first power is applied, its LED flashes on and off alternately and repeatedly at 1-second intervals. It implies that it has not been assigned a node ID yet and start the auto inclusion. To add the device into the Z-Wave™ network, first make sure the primary controller is in the inclusion mode.

### 1.1.1. Auto Inclusion

In the front casing, there is an On/Off button with LED indicator which is used to toggle switch on and off or carry out inclusion, exclusion, reset or association. When first power is applied, its LED flashes on and off alternately and repeatedly at 1-second intervals. It implies that it has not been assigned a node ID and cannot work with Z-Wave enabled devices. The table below lists an operation summary of basic Z-Wave function. Please refer to the instructions for your Z-Wave™ certificated primary controller to access the Setup function, and to include/exclude/associate devices.

**Note:** Auto inclusion timeout is 2 minute during which the node information of explorer frame will be emitted once several seconds. Unlike “inclusion” function as shown in the table below, the execution of auto inclusion is free from pressing the Include/Exclude button in on the front case.

The table below lists an operation summary of basic Z-Wave functions. Please refer to the instructions for your Z-Wave™ Certificated Primary Controller to access the Setup function, and to include/exclude/associate devices.

Function	Description
No node ID	The Z-Wave controller does not allocate a node ID to the Switch
Inclusion (Add)	<ol style="list-style-type: none"> <li>1. Have Z-Wave™ Controller entered Inclusion (Add) mode.</li> <li>2. Pressing the on/off button three times in rapid succession within 1.5 seconds will enter inclusion mode.</li> </ol>
Exclusion (Remove)	<ol style="list-style-type: none"> <li>1. Have Z-Wave™ Controller entered Exclusion (remove) mode.</li> <li>2. Pressing On/Off button three times in rapid succession within 1.5 Press will enter exclusion mode</li> </ol>
	Node ID has been excluded.
Reset	<ol style="list-style-type: none"> <li>1. Pressing On/Off button three times within 1.5 seconds will enter inclusion mode.</li> </ol>

	<ol style="list-style-type: none"> <li>2. Within 5 seconds, press On/Off button again for 1 second until LED is off.</li> <li>3. IDs are excluded.</li> </ol>
Association	<ol style="list-style-type: none"> <li>1. Have Z-Wave Controller entered association mode. Or Pressing On/Off button three times within 1.5 seconds will enter association mode</li> <li>2. There are four groups for the switch (it can associate max five devices).</li> </ol>
	<ol style="list-style-type: none"> <li>1. Including a node ID allocated by Z-Wave™ Controller means “<b>Add</b>” or “<b>Inclusion</b>”. Excluding a node ID allocated by Z-Wave™ Controller means “<b>Remove</b>” or “<b>Exclusion</b>”.</li> <li>2. Failed or success in including/excluding the node ID can be viewed from Z-Wave™ Controller.</li> <li>3. Association: it can be associated by Z-Wave devices with association</li> <li>4. Use the “Reset” procedure only in the event that the network primary controller is missing or otherwise inoperable</li> </ol>

## 1.2 LED Indication

To distinguish what

State Type	LED Indication
No node id	1-second on, 1-second off
Inclusion (Add)	Press on, for off, Press off, for on
Exclusion (Remove)	Press on, for off, Press off, for on
Node ID Excluded	1-second on, 1-second off
Reset	Press on, for off, Press off, for on
Association	Press on, for off, Press off, for on


## 1.3 Choosing a Suitable Location

1. The SD-104 Z-Wave Wall Dimmer can replace your original Dimmer the location there for would be the same as your original wall Dimmer. Do not place the Dimmer in a wet environment.


## 1.4 Installation and Basic Operation

### Step 1 Connection diagram of SD-104.

Note: A Neutral wire is required for the correct operation.

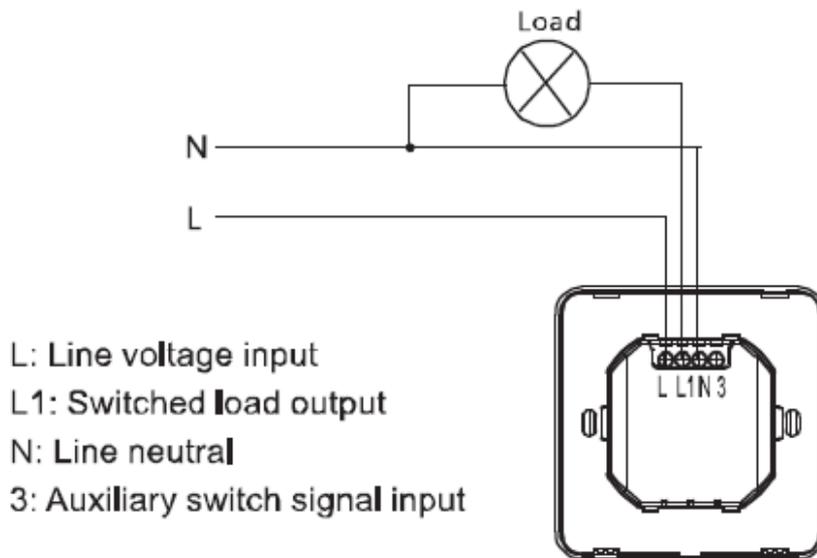

### Step 2 Removal of front cover.

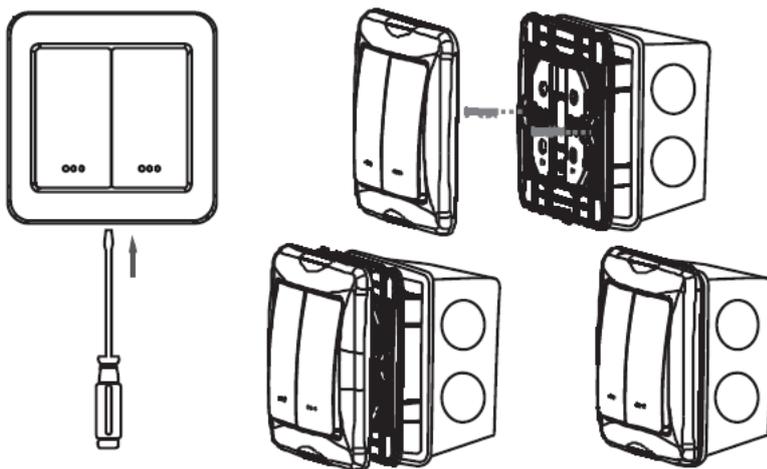

## Step 3 Basic Operation

### Basic Operation (Local Control)

The paddle on the switch allows the user to:

- The on or off the attached load.
- Include or exclude the module from the Z-Wave system.
- Control other Z-Wave enabled devices.
- Tapping top of switch turns the load attached on.
- Tapping bottom of switch turns the load attached off.
- Pressing and holding the top and bottom switch does affect the load attached and will allow dimming and brightening of the load.

**Caution:** When dimmed at the lowest setting, even though the load looks like it's off, it still has power. Tap bottom of switch to turn off completely. It is best to turn off the power at the circuit breaker to service the load.

**Note:** Upon restoration of power after a power loss, the switch returns to previous known state.

### LED Indication

The LED on the switch will turn on when the load attached is off, to act as a night light. However, the LED can be user configured to turn on when the load attached is on the switch will flicker its LED when it is transmitting to any of its 4 groups. This can be changed if desired. See "LED transmission indication"

### Remote Control

The switch will respond to BASIC and BINARY commands that are part of the Z-Wave system. Refer to your controller's instructions as to whether your controller can transmit those commands.

### Advance operation all on/all off

The switch support the all on/all off commands. The switch can be set to respond to all on and all off commands 4 different ways. Refer to your controller for information on how to set the switch to operate in the manner you desire. Some controllers may be only able to set certain settings of all on/all off response. The 4 different ways the switch can be setup to respond to all on and all off

## 1.5 Association and Parameter

### 1.5.1. Association Setup

#### Association

The switch supports the association command.

The switch can be set to control other Z-Wave devices. Those devices must be installed in their permanent location.

You can turn on and off, and even dim other Z-Wave devices once they are “associated” into 1 of 2 groups within the switch. Each group is turned on or off (or dimmed) by tapping or holding the switch a differing amount of times.

#### Group 1 Control:

If you associate a Z-Wave device into Group 1, you can turn that device ON and OFF by tapping the top or bottom of the dimmer. You can brighten devices by pushing and holding the top of the dimmer and, Dim by pushing and holding the bottom of the dimmer. The load attached to the dimmer is not affected. The LED on the dimmer will indicate the status of Group 1. Group 2 will be polled at a specific interval and the LED on the left switch will indicate the status of Group 1. The polling interval can be configured. The Group1 name is lifeline (Profile MSB=0x00, Profile LSB=0x01).

#### Group 2 Control: (Not in use for Single Button SD-104)

If you associate a Z-Wave device into Group 2, you can turn that device ON and OFF by tapping the top or bottom of the right switch. You can brighten or dim devices by pushing and holding the top of the right switch. Dim by pushing and holding the bottom of the right switch. The load attached to the switch is not affected. The LED on the right switch will indicate the status of Group 2. Group 2 will be polled at a specific interval and the LED on the right switch will indicate the status of Group 2. The polling interval can be configured. The Group2 name is On/Off Dimmer 1 (Profile MSB=0x20, Profile LSB=0x01). This group can't be supported to single panel switch.

#### Group 3 Control: (Not in use for Single Button SD-104)

If you associate a Z-Wave device into Group 3, you can turn that device ON or OFF by tapping the top or bottom of the right switch twice. You can brighten or dim devices by tapping the switch once then push and hold the top or bottom of the right switch. The load attached to the switch is not affected. The Group3 name is On Off Dimmer 2 (Profile MSB=0x20, Profile LSB=0x02). This group can't be supported to single panel switch.

#### Group 4 Control:

If you associate a Z-Wave device into Group 4, that device will be commanded to turn on or off when the switch is commanded to turn on or off. Caution: The switch will not transmit to Z-Wave devices in Group 4 if it is already in the state that the Z-Wave command commanded it to. You can associate up to 5 Z-Wave devices into each of these groups. For instructions on how to “associate” a Z-Wave device into one of these groups, refer to your wireless controller instructions. (If you are using the z-wave controller, refer to the setup menu, association section). A note about dimming, if you combine Z-Wave enabled dimmers and other types of Z-Wave devices in a group, place a Z-Wave enabled dimmer into the empty group first to ensure that the dimming operates correctly. The Group4 name is wireless. (Profile MSB=0x20, Profile LSB=0x03)

## 1.5.2 Configuration Parameter

Configuration Parameter	Function	Value	Default Value	Size (Byte)
1	Night Light	0 - 1	1	1
2	Memory Function	0 - 1	1	1
3	Invert Switch	0 - 1	0	1
4	LED Transmission Indication	0 - 2	1	1
5	Suspend Group 4	0 - 1	0	1

## 1.5.3 Parameter Description

### Night light

-Parameter NO:1

-Length: 1 Byte

-Valid values=0 or 1 (default value is 1)

The LED on the switch will by default, turn ON when the load attached is turn OFF. To make the LED turn ON when the load attached is turn ON instead, set parameter 1 to a value of 1.

### Memory function

-Parameter NO:2

- Length: 1 Byte

-Valid values=0 or 1 (default value is 1)

Stated in the above form ,switch by default value is 1, when the value is 0, switch memory function not open; when the value is 1,open switch memory function.

### Invert switch

-Parameter NO:3

-Length: 1 Byte

-Valid values=0 or 1 (default value is 0)

To change the top of the switch to OFF and the bottom of the switch ON, set parameter 3 to 1.

### LED transmission indication

-Parameter NO:4

-Length: 1 Byte

-Valid values = 0,1,2,(default value is 1)

The switch will flicker its LED when it is transmitting to any of its 4 groups. This flickering can be set to not flicker at all (set to 0), to flicker the entire time it is transmitting (set to 2), or to flicker for only 1 second when it begins transmitting (Set to 1). By default, the switch is set to flicker for only 1 second. Each configuration parameter can be set to its default setting by setting the default bit in the configuration set command. See your controller's instructions on how to do this (and if it supports it). All configuration commands will be reset to their default state when the switch is reset from the Z-Wave system.



### Suspend group 4

-Parameter NO:5

-Length:1 Byte

-Valid values = 0 or 1(default value is 0)

You may wish to disable transmitting commands to Z-Wave devices that are in Group 4 without “disassociating” those devices from the group. Setting parameter 5 to the value of 1 will stop the switch from transmitting to devices that are “associated” into Group 4.

## 1.6 Specifications

Specification	
Model	SD-104 Dimmer Switch
Z-Wave Standard	Z-wave plus
Z-Wave Frequency	CE : 868.40MHz,869.85MHz
Maximum Transmission Distance	40M (indoor) 100m (open space)
Supply Voltage	230 VAC 50Hz
Function	Dimmer Control
Maximum Output Power	300W
LED Indicator	1 x LED (in paddle)
Dimension and Environment	
Dimensions	86(L) x 86(W) x 24(H) mm
Operating Temperature	0 ~ 40° C

**\*\* Specifications are subject to change and improvement without notice.**



OvisLink Corp.,

<http://www.airlive.com/>

TEL: +886 2 2218 6888

FAX: +886 2 2918 6988

