


Installation Steps
Example (A) Connection

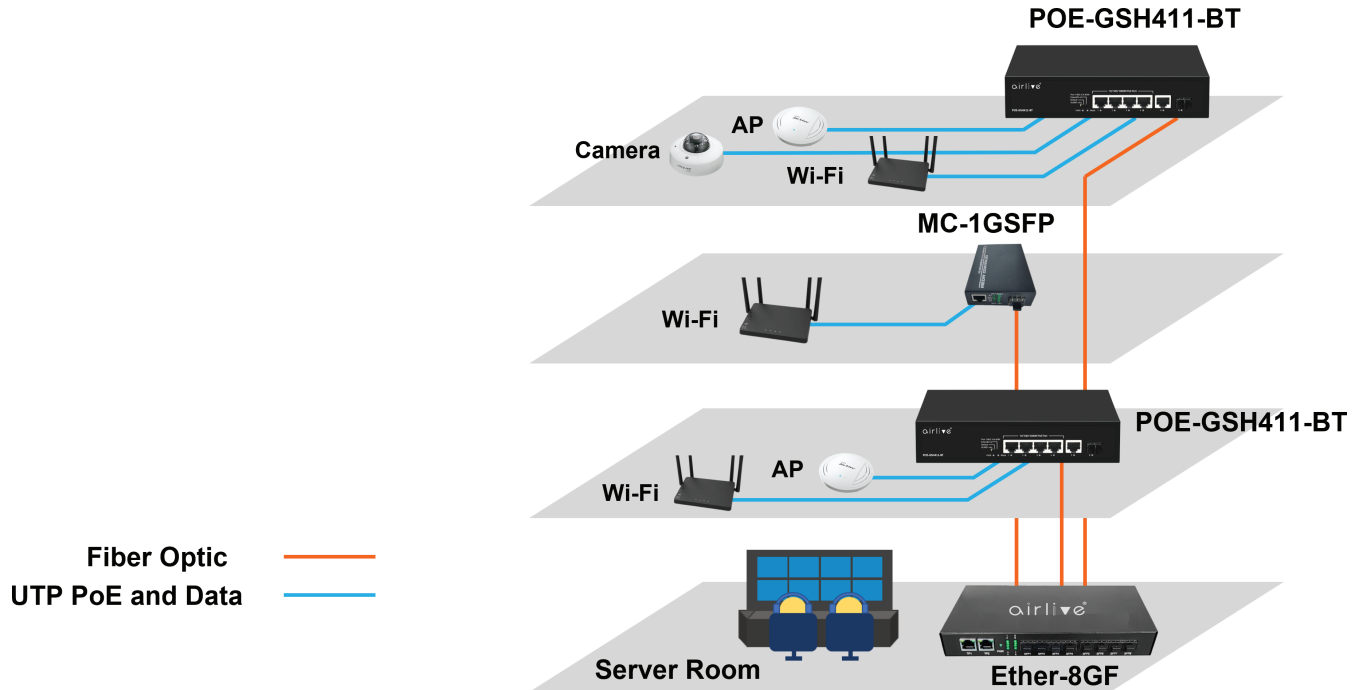

LED DEFINITIONS

PWR	Green ON	Power is on and normal.
	Green OFF	The switch is not receiving power.
Link/Act 1~8 SFP	Green ON	The port Status LEDs ON Link Connection, LEDs Blinking Data transmission.
Link/Act RJ-45	Green ON	The port Status LEDs ON Link Connection, LEDs Blinking Data transmission.
	Green OFF	No Connection.
Speed	Orange ON	1Gbps.

EN English

Installation Step:

1. Remove the switch and accessories from the package.
2. Connect power adapter to the switch. Make sure that Power (PWR) LED is on.
3. Connect your SFP LX/SX module to one of the 8 SFP port of the switch
Use the Fiber switch as main connection point of other fiber device (see A).
4. Check the Port LED indicator status. When a device is connected SFP/RJ-45 it light on.
5. For more product information visit www.airlive.com.