

## Declaration of Conformity

We, Manufacturer/Importer  
**AirLive Technology Corporation**  
4F, No.132, Lane 235, Baoqian Rd., Xindian Dist.,  
New Taipei City 23145, Taiwan

Declare that the product  
**10-Port Gigabit L2 Managed PoE+ Switch**  
**Including 2 SFP ports, 120W**  
**POE-GSH802M-120**  
**is in conformity with**

In accordance with 2014/30/EU and 2014/35/EU Directive


Clause	Description
■ EN 55032:2015+A11:2020	Electromagnetic compatibility (EMC)
■ EN 62368-1:2014+A11:2017	Electromagnetic compatibility (LVD)

■ CE marking



### Manufacturer/Importer

Name : A van Rossem Position/ Title : Product Manager  
Place : Republic of China (Taiwan) Date : June 2021

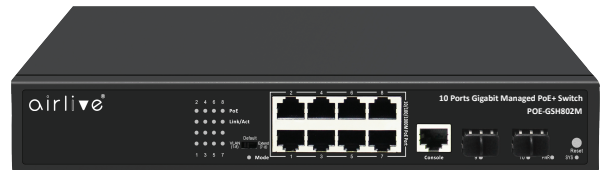

## Regulatory Approvals


### • CE Statement

This product complies with the 2014/30/EU and 2014/35/EU directives, including the following safety and EMC standards:

- **EN 55032:2015+A11:2020**  
Electromagnetic compatibility (EMC) - Electromagnetic compatibility of multimedia equipment - Emission requirements
- **EN 61000-3-2:2019**  
Electromagnetic compatibility (EMC) - Part 3-2: Limits - Limits for harmonic current emissions (equipment input current ≤ 16 A per phase)
- **EN 61000-3-3:2013+A1:2019**  
Electromagnetic compatibility (EMC) - Part 3-3: Limits - Limitation of voltage changes, voltage fluctuations and flicker in public low-voltage supply systems, for equipment with rated current ≤ 16 A per phase and not subject to conditional connection
- **EN 55035:2017+A11:2020**  
Electromagnetic compatibility (EMC) - Electromagnetic compatibility of multimedia equipment - Immunity requirements
- **EN 62368-1-2014+A11-2017**  
Electromagnetic compatibility (LVD) - Safety, Audio/Video, Information and Communication technology equipment Part 1: Safety requirements

### • CE Marking Warning


This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

 AirLive Technology Corporation declares that this device is in compliance with the essential requirements and other relevant provisions of directive 2014/30/EU.



## ▼ Installation Steps

Figure A

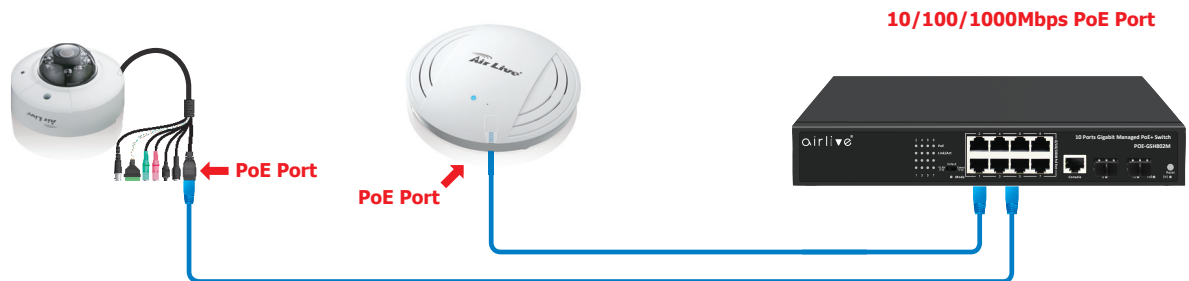

## LED DEFINITIONS

Power	Red ON	Power is on and normal.
	Red Off	The switch is not receiving power.
Link/Act/Speed	Green ON	The port Status LEDs ON Link Connection, LEDs Blinking Data transmission.
Sys	Green ON	System is Running, Only Blinking at Start-up
Mode (DIP Indicator)	Green ON	VLAN Mode.
	Green OFF	Default Mode.
PoE Mode RJ45 ports	Green ON	Port is enabled and supplying power to PD.
	Green Blinking	Extend Mode.

### EN English

#### Important Information

- The default IP address: **192.168.2.1**
- The default username / password is **admin**
- The content of user's guide and associated software can be downloaded from the website ([www.airlive.com](http://www.airlive.com))

#### Installation Step:

1. Connect your device's PoE port to the switch's POE port
2. Your PoE device should get the power from the switch now. If you want to change settings via web management. Please follow the instructions below.
3. Set your PC's IP address to 192.168.2.50.
4. Open your web browser and enter "192.168.2.1" to get into the switch's web management.
5. Enter "admin" for username, "admin" for password.

### ES Español

#### Información importante

- Default IP: **192.168.2.1**
- Contraseña default: **admin**
- El contenido de la Guía de Usuario y el software asociado puede descargarse desde el sitio web ([www.airlive.com](http://www.airlive.com))

#### Pasos de instalación:

1. Conecte el puerto PoE de su dispositivo al puerto PoE del switch.
2. En este momento su dispositivo PoE debe recibir energía desde el switch. Si usted desea cambiar los parámetros vía web, por favor siga las siguientes instrucciones.
3. Configure la dirección IP de su PC en 192.168.2.50.
4. Abra su navegador web e ingrese "192.168.2.1" para acceder al administrador web del switch.
5. Ingrese "admin" como nombre de usuario, "admin" como contraseña

### DE Deutsch

#### Wichtige Information

- Die voreingestellte IP Adresse: **192.168.2.1**
- Das voreingestellte Passwort lautet **admin**
- Das Benutzerhandbuch und die benötigte Software kann auf unserer Webseite ([www.airlive.com](http://www.airlive.com))

#### Installationsschritte:

1. Verbinden Sie den PoE Port ihres Gerätes mit dem PoE Port vom Switch.
2. Ihr PoE Gerät sollte jetzt den Strom vom Switch beziehen. Wenn Sie Einstellungen via Webbrowser ändern möchten, dann folgen Sie bitte den unten angegebenen Schritten:
3. Stellen Sie die IP des PC's auf 192.168.2.50.
4. Öffnen Sie ihren Browser und geben "192.168.2.1" ein. Die gelangen zur Web-Management Oberfläche.
5. Geben Sie "admin" als Benutzernamen und "admin" als Passwort ein.

### PT Português

#### Informação Importante

- O endereço IP padrão: **192.168.2.1**
- A palavra-chave padrão é **admin**
- O conteúdo do guia do utilizador e software associado podem ser carregados através do website ([www.airlive.com](http://www.airlive.com))

#### Passos de Instalação:

1. Conecte a porta do seu dispositivo PoE à porta POE do switch
2. Seu dispositivo PoE deve obter agora a energia através do switch. Se desejar alterar as configurações através do gestor web. Siga por favor as instruções em baixo.
3. Defina o endereço IP do seu PC para 192.168.2.50.
4. Abra o seu explorador web e digite "192.168.2.1" para entrar no gestor web do switch.
5. Digite "admin" para o username, "admin" para a password.