

airlive®



Revolve Mesh W6-184QAX AX1800 Router

Quick Installation Guide

1 Setup your Main Router

Please check the following default settings, if unable to find the wireless signal from your cellphone.
Please connect PC to router and setup.

Default IP address: 192.168.10.1
Default SSID: (refer to device)
Default SSID2: (refer to device)
Default WIFI Password: 123456789
Default login password: **admin**

Important: In the Revolve Mesh bundle there are 2 devices, they are marked on the back as “Main” and “Agent”.
Please use the device marked “Main” as the device which is connected via its WAN port to your Modem.
Do not connect the WAN port of the “Agent” device.

2 Connect to Wi-Fi

Please make sure your Mobile device or computer is connected to the router. Make sure the “Main” device is powered on.



For the correct SSID please see the product label on the bottom of the “Main” router. Two SSID’s are shown one is the 2.4Ghz and the other the 5Ghz. Select one the one you want to connect to.


3 Login

Open your web browser on mobile device or computer and type <http://192.168.10.1>
And enter the default password.



4 Internet Setup

First time login the system will ask you to run the wizard for the internet connection and wireless setting, the Mesh Setup is already pre-configured.

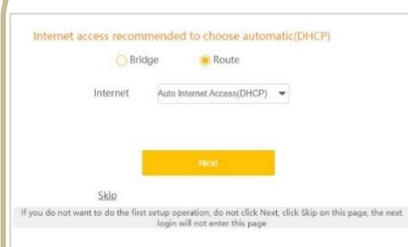

After the wizard is finalized, your router is ready for use.



5 Mesh Setup

The Revolve Mesh bundle is pre-configured. When both the “Main” and “Agent” device are turned on the blue Mesh LED on both device will be solid.

MESH LED Indicator: Blue Mesh is connected normally.
Status: On

Mesh connecting.
Status: Blinking

Mesh is disabled or not connected.
Status: Off



For more detailed information see the user guide or visit www.airlive.com