

Q: How to reset Wi-Fi Setting and Gateway password?

A: Press reset button at least 10 seconds.

(Note: This action will reset your Password, Wi-Fi setting)



Q: How to reset Configuration Settings?

A: Press reset button at least 20 seconds

(Note: This action will reset your complete configuration like Macro's, Schedules and Scenes, but the Z-Wave Devices will be kept.)

