


Q: How to change the distance for the Airlive PIR Motion Sensor SI-102

A: The default distance is around 2 meter; this distance can be changed using the Parameter setting. For more information and details please see the User Manual.

In the Airlive SmartLife Plus APP go to the PIR Sensor.

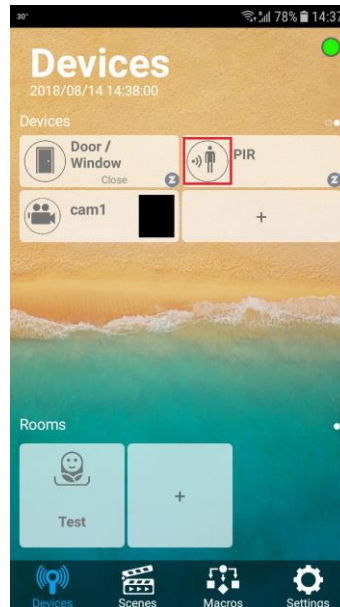

In the PIR setup go to “Config” by clicking on the >> .

Enter the Param: 3

Enter the Value: default is 80 when you enter a higher number the distance go further 99 is the max.

Enter the Size: 1

Now remove the small cover (with logo) from the PIR sensor and push the button on the back ones. Now press “Write” within 10 seconds! To check if the writing was successful enter only 3 at Param and press “Read” when the Value now shows 95 it means it was changed successful.

