

## Q: How to enable the POE pass through function of Airmax 5X

A: The AirMax5X have a special feature which is PoE Pass through, the PoE pass-through. The PoE pass-through allows the AirMax5X to have 48V output in order to power up another AirMax5X or IP cameras.

The PoE pass-through function is disabled at default settings. Before enable the PoE Pass-through function, please make sure the device you want to power up is connect to the secondly port and the device can accept 48V input.

To enable the PoE pass through, please follow below steps:

1. Connect the AirMax5X's mainly port to PoE injector's PoE port.
2. Connect the PC/NB in PoE injector's LAN port.
3. Connect the device you want to power up to the secondly port of the AirMax5X.
4. Visit AirMax5X's web UI and enable the PoE pass-through function in **System Configuration -> System Management->mark the "Enable POE Pass Through"** ->Save & Start.

