

Q: How to replace the battery in the SI-102 (PIR Sensor)

A: When the device reports the low battery message. The battery should be replaced for a new one. The battery type is CR123A, 3.0V. Please follow the below steps on how to open the sensor.

