

AirDual-AC12
Wi-Fi 5 AC 1200Mbps Outdoor CPE
(Patch antenna)

AWOD-12ACi
Wi-Fi 5 AC 1200Mbps Outdoor CPE
(Omni antenna)

AWOD-30AXi
Wi-Fi 6 AX 1800Mbps Outdoor CPE
(Omni antenna)

Web Manual



Ver. 1.0

CONTENTS

Chapter	1 Product Introduction	1
	1.1 Package Contents AirDual-AC12 and AWOD-12ACi	1
	1.2 Package Contents AWOD-30ACi	1
	1.3 Product Specification AirDual-AC12	2
	1.4 Product Specification AWOD-12ACi	3
	1.5 Product Specification AWOD-30ACi	4
Chapter	2 Hardware Installation	5
	2.1 AirDual-AC12 and AWOD-12ACi Port description	5
	2.2 AWOD-30AXi Port description	6
	2.3 AirDual-AC12, AWOD-12ACi, AWOD-30AXi Hardware installation	7
Chapter	3 Quick Installation Guide	8
	3.1 AirDual-AC12, AWOD-12ACi, AWOD-30AXi , Web login Management	8
	3.2 Configuring the IP Address Manually	8
	3.3 Starting Setup in the Web UI	9
Chapter	4 Configure the CPE	10
	4.1 Main Home Page	10
	4.2 Wizard Configuration	11
	4.3 Gateway Mode (Router) Wizard	12
	4.3.1 WAN Settings Static IP Wizard	13
	4.3.2 WAN Settings PPPoE Wizard	14
	4.3.3 WAN Settings DHCP Wizard	15
	4.3.4 Wi-Fi Settings Wizard	15
	4.4 AP Mode Wizard	18
	4.4.1 Wi-Fi Settings Wizard	19
	4.5 Repeater Mode	21
	4.5.1 Wi-Fi Settings Wizard	22
	4.5.2 LAN Settings Wizard	23
	4.6 Wi-Fi	25
	4.6.1 VAP	26
	4.6.2 Wi-Fi Analyzer	27
	4.6.3 MAC ACL	28
	4.6.4 Wi-Fi Timer	29
	4.6.5 Repeater	29
	4.6.6 Advanced	30

Chapter	4.7 Network (AP Mode)	31
	4.7.1 LAN Settings	31
	4.7.2 Cloud	32
	4.8 Network (Gateway Mode)	32
	4.8.1 LAN Settings	32
	4.8.2 Static DHCP	33
	4.8.3 WAN	34
	4.8.4 WAN DHCP	34
	4.8.5 WAN Advanced Settings	35
	4.8.6 WAN Static IP	36
	4.8.7 WAN PPPoE	37
	4.8.8 Cloud	38
	4.9 Firewall (Gateway Mode Only)	39
	4.9.1 URL Filter	39
	4.9.2 IP Filter	40
	4.9.3 MAC Filter	42
	4.9.4 Port Mapping	43
	4.9.5 DMZ	45
	4.10 Manage	46
	4.10.1 Configure	46
	4.10.2 Timed Reboot	47
	4.10.3 Upgrade	48
	4.10.4 Time Manager	49
	4.10.5 Log	50
	4.10.6 QoS (Gateway Mode only)	51
	4.10.7 IP Group (Gateway Mode only)	53
	4.10.8 Time Group (Gateway Mode only)	54
	4.10.9 DDNS (Gateway Mode only)	55
Chapter	5 FIT Mode	56

Chapter 1. Product Introduction

1.1 Package Contents AirDual-AC12 and AWOD-12ACi

Before using this CPE, please check if there is anything missing in the package, and contact your dealer of purchase to claim for missing items:

- AirDual-AC12 or AWOD-12ACi CPE
- 1x UTP Cable
- 1x Power Cable
- 1x PoE Injector
- 1x Clamp Hoop
- Installation Guide

1.2 Package Contents AWOD-30ACi

Before using this CPE, please check if there is anything missing in the package, and contact your dealer of purchase to claim for missing items:

- AWOD-30AXi CPE
- 2x Clamp Hoop
- Installation Guide

1.3 Product Specification AirDual-AC12

Model	AirDual-AC12
Device Interface <ul style="list-style-type: none"> • Main Chip: Qualcomm QCA9563 • Flash:16MB • RAM:128MB • Standard: IEEE802.11ac, IEEE802.3, IEEE 802.11n, IEEE 802.11a ,802.11b, 802.3at, 802.3az • Frequency: 5.020GHz-6.100GHz/2.312GHz to 2.4835GHz • Channel:CH36 ~CH165/CH1-13 (Country depended) • Modulation: OFDM = BPSK, QPSK,16-QAM,64-QAM; DSSS = DBPSK, DQPSK, CCK • Data Rate: 1200Mbps (2.4Ghz 300Mbps, 5.8Ghz 900Mbps) • RF Output Power: ≤ 22+2dBm (500mW) • Antenna: 2.4GHz: 12dBi Panel Antenna\5GHz: 14dBi Panel Antenna • WAN: 1 * 10/100/1000Mbps RJ-45 WAN Port, support IEEE 802.3af 48V PoE in • LAN: 1 * 10/100/1000Mbps RJ-45 LAN Port • Reset Button:1 * Reset Button, Press 10 seconds, the device will revert to factory default settings. • LED Light: SYS, Wi-Fi, WAN, LAN, Signal Strength • Power Consumption: <30W • Water-proof Level: IP65 Firmware Function Control <ul style="list-style-type: none"> • Operation Mode: Wireless AP, Gateway, WiFi Repeater • Dynamic IP/Static IP/PPPoE/L2TP(Dual Access) /PPTP(Dual Access) Wireless <ul style="list-style-type: none"> • SSID broadcast, SSID hide • Multiple SSID up to 8 • Firewall: DoS, SPI Firewall, IP, MAC, URL filter, IP and MAC Address Binding • WiFi timed on/off • Multicast acceleration • VPN pass through • DDNS, Port Forwarding, DMZ Host • Security: OPEN, WPA, WPA2, WPA-PSK, WPA2-PSK, 802.1x encryption • Support RF power adjustable based on environment • Max Users: 128 	Network Function <ul style="list-style-type: none"> • Tag VLAN setting based on SSID • DHCP server Device Management <ul style="list-style-type: none"> • Backup the configuration information • Restore the configuration information • Reset to factory default settings • Device reboot: reboot immediately or timed reboot • Firmware upgrade • Time management: including system time and time synchronization • System log • Support WEB GUI management • Support Cloud remote management (AP Mode) Multiple Language <ul style="list-style-type: none"> • English ESD Protection <ul style="list-style-type: none"> • ESD: Air discharge: ±8KV, Contact discharge: ±4KV Environment <ul style="list-style-type: none"> • Operating temperature: -30°C ~ +55°C • Storage Temperature: -40°C ~ +70°C • Operating Humidity: 10% ~ 90% (non-condensing) • Storage Humidity: 5% ~ 90% (non-condensing) • Enclosure: IP65 Standard package of switch <ul style="list-style-type: none"> • Product size: 31.5cm x 14.5cm x 8cm (L*W*H) • Package size: TBD cm(L*W*H) • Package content: TBD 1 x AirDual-AC12, PoE Injector, Install Accessory, LAN Cable, User Manual Ordering information <ul style="list-style-type: none"> • AirLive AirDual-AC12 Wi-Fi AC1200 Gigabit Outdoor CPE

1.4 Product Specification AWOD-12ACi


Model	AWOD-12ACi
Device Interface <ul style="list-style-type: none"> • Main Chip: Qualcomm QCA9563 • Flash:16MB • RAM:128MB • Standard: IEEE802.11ac, IEEE802.3, IEEE 802.11n, IEEE 802.11a ,802.11b, 802.3at, 802.3az • Frequency: 5.150GHz-5.850GHz/2.312GHz to 2.4835GHz • Channel: CH36 ~CH165/CH1-13 (Country depended) • Modulation: OFDM = BPSK, QPSK,16-QAM,64-QAM; DSSS = DBPSK, DQPSK, CCK • Data Rate: 1200Mbps (2.4Ghz 300Mbps, 5.8Ghz 900Mbps) • RF Output Power: ≤ 22+2dBm (500mW) • Antenna: 5dBi Omni Antenna • WAN: 1 * 10/100/1000Mbps RJ-45 WAN Port, support IEEE 802.3af 48V PoE in • LAN: 1 * 10/100/1000Mbps RJ-45 LAN Port • Reset Button: 1 * Reset Button, Press 10 seconds, the device will revert to factory default settings. • LED Light: SYS, Wi-Fi, WAN, LAN, Signal Strength • Power Consumption: <30W • Water-proof Level: IP65 Firmware Function Control <ul style="list-style-type: none"> • Operation Mode: Wireless AP, Gateway, WiFi Repeater • Dynamic IP/Static IP/PPPoE/L2TP(Dual Access) /PPTP(Dual Access) Wireless <ul style="list-style-type: none"> • SSID broadcast, SSID hide • Multiple SSID up to 8 • Firewall: DoS, SPI Firewall, IP, MAC, URL filter, IP and MAC Address Binding • WiFi timed on/off • Multicast acceleration • VPN pass through • DDNS, Port Forwarding, DMZ Host • Security: OPEN, WPA, WPA2, WPA-PSK, WPA2-PSK • Support RF power adjustable based on environment • Max Users: 128 	Network Function <ul style="list-style-type: none"> • Tag VLAN setting based on SSID • DHCP server Device Management <ul style="list-style-type: none"> • Backup the configuration information • Restore the configuration information • Reset to factory default settings • Device reboot: reboot immediately or timed reboot • Firmware upgrade • Time management: including system time and time synchronization • System log • Support WEB GUI management • Support Cloud remote management (AP Mode) Multiple Language <ul style="list-style-type: none"> • English ESD Protection <ul style="list-style-type: none"> • ESD: Air discharge: ±8KV, Contact discharge: ±4KV Environment <ul style="list-style-type: none"> • Operating temperature: -30°C ~ +55°C • Storage Temperature: -40°C ~ +70°C • Storage Humidity: 5% ~ 90% (non-condensing) • Enclosure: IP65 Standard package of switch <ul style="list-style-type: none"> • Product size: 31.5cm x 14.5cm x 8cm (L*W*H) • Package size: TBD cm(L*W*H) • Package content: TBD 1 x AWOD-12ACi, PoE Injector, Install Accessory, LAN Cable, User Manual Ordering information <ul style="list-style-type: none"> • AirLive AWOD-12ACi Wi-Fi AC1200 Gigabit Outdoor AP

1.5 Product Specification AWOD-30AXi

Model	AWOD-30AXi
Device Interface <ul style="list-style-type: none"> • Main Chip: Qualcomm IPQ5018 • Flash: NOR 8MB + NAND 128MB • RAM: 512MB • Standard: IEEE802.11ax, IEEE802.11ac, IEEE802.3, IEEE 802.11n, IEEE 802.11a, 802.11b, 802.3at, 802.3az • Frequency: 5.150GHz-5850GHz/2.4GHz to 2.484GHz • Channel: CH36 ~CH165/CH1-13 (Country depended) • Modulation: DL/UL-OFDMA modulation, Seamless Roaming • Data Rate: 3000Mbps (2.4Ghz 600Mbps, 5.8Ghz 2400Mbps) • RF Output Power: $\leq 27+2\text{dBm}$ (500mW) • Antenna: 8dBi Omni Antenna • WAN: 1 * 10/100/1000Mbps RJ-45 WAN Port, support IEEE 802.3af 48V PoE in • LAN Console: 1 * 10/100/1000Mbps RJ-45 Console Port • Reset Button: 1 * Reset Button, Press 10 seconds, the device will revert to factory default settings. • LED Light: SYS, WAN, 2.4G, 5.8G • Power Consumption: <24W • Water-proof Level: IP67 Firmware Function Control <ul style="list-style-type: none"> • Operation Mode: Wireless AP, Gateway, WiFi Repeater • Dynamic IP/Static IP/PPPoE/L2TP(Dual Access) /PPTP(Dual Access) Wireless <ul style="list-style-type: none"> • SSID broadcast, SSID hide • Multiple SSID up to 8 • Firewall: DoS, SPI Firewall, IP, MAC, URL filter, IP and MAC Address Binding • WiFi timed on/off • Multicast acceleration • VPN pass through • DDNS, Port Forwarding, DMZ Host • Security: OPEN, WPA, WPA2, WPA-PSK, WPA2-PSK, WPA3 • Support RF power adjustable based on environment • Max Users: 160 	Network Function <ul style="list-style-type: none"> • Tag VLAN setting based on SSID • DHCP server Device Management <ul style="list-style-type: none"> • Backup the configuration information • Restore the configuration information • Reset to factory default settings • Device reboot: reboot immediately or timed reboot • Firmware upgrade • Time management: including system time and time synchronization • System log • Support WEB GUI management • Support Cloud remote management (AP Mode) Multiple Language <ul style="list-style-type: none"> • English ESD Protection <ul style="list-style-type: none"> • ESD: Air discharge: $\pm 8\text{KV}$, Contact discharge: $\pm 4\text{KV}$ Environment <ul style="list-style-type: none"> • Operating temperature: $-30^{\circ}\text{C} \sim +70^{\circ}\text{C}$ • Storage Temperature: $-40^{\circ}\text{C} \sim +70^{\circ}\text{C}$ • Storage Humidity: 5% ~ 95% (non-condensing) • Enclosure: IP67 Standard package of switch <ul style="list-style-type: none"> • Product size: 30.3cm x 18cm x 8.7cm (L*W*H) • Package size: TBD cm(L*W*H) • Package content: TBD 1 x AWOD-30AXi, PoE Injector, Install Accessory, LAN Cable, User Manual Ordering information <ul style="list-style-type: none"> • AirLive AWOD-30AXi Wi-Fi 6 AX3000 Gigabit Outdoor AP


Chapter 2. Hardware Installation

2.1 AirDual-AC12 and AWOD-12ACi Port description.

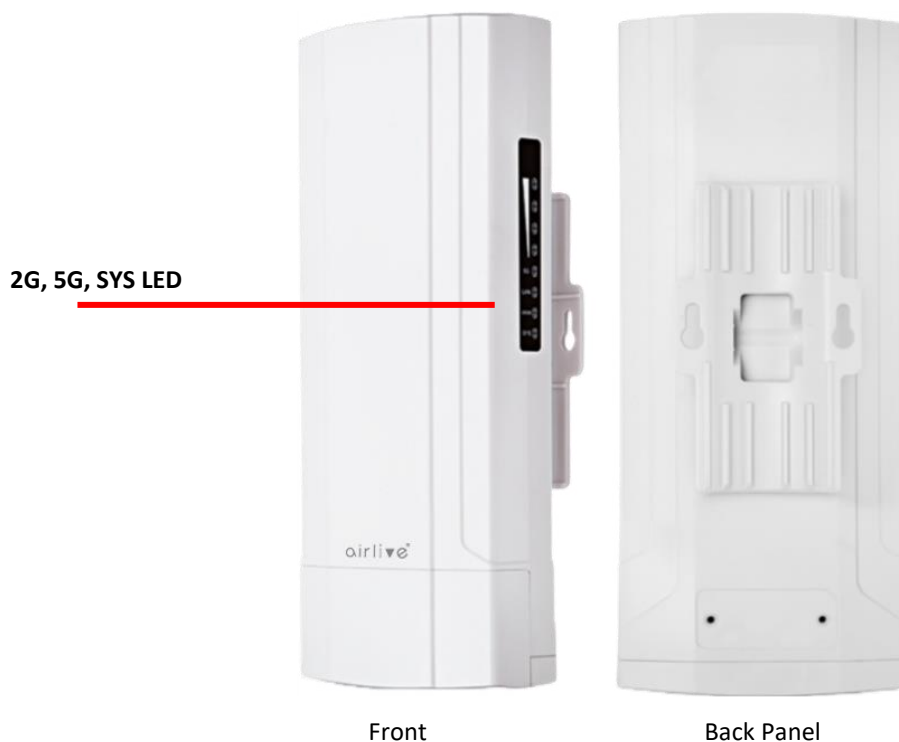

LED Description.


LED	Status	Function
2G	On (Green)	2.4G is On
5G	On (Green)	5G is On
SYS	On (Green)	Outdoor CPE is ON and working

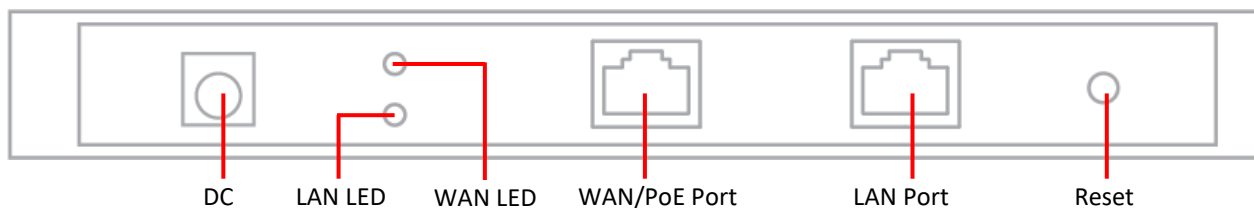

Port Description.

Port	Description
12V DC	12V DC port for the power adapter(DC-Jack 5.5 x 2.1mm)
LAN/WAN LED	The LAN/WAN port is connected
WAN/PoE	LAN port with Power over Ethernet (PoE) IN (802.3at/af)
LAN	LAN port connecting to the network equipment.
Reset	To restore to the factory default setting, press and hold the Reset Button for about 15 seconds, and then release it.


2.2 AWOD-30AXi Port description.

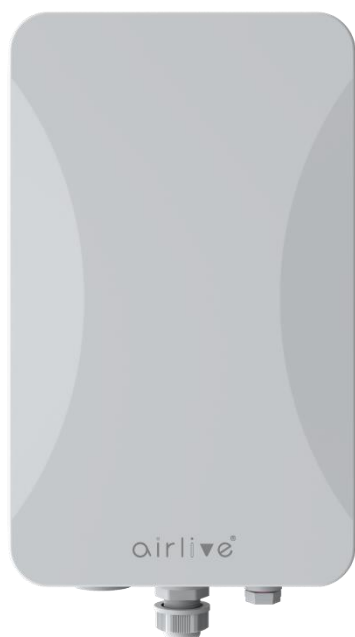

Front Panel



Bottom Panel

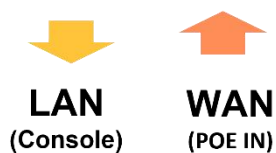

LED Description.

LED	State	Function
PWR	On	Power On
	Off	Power Off
SYS	On/Flash	SYS working
	Off	Device off
WAN	On/Flash	WAN connected / data transmitting
	Off	WAN disconnected
2.4G	On	2.4G On
	Off	2.4G Off
5G	On	5G On
	Off	5G Off

Port Description.

Port	Description
WAN/LAN/PoE	WAN/LAN port with Power over Ethernet (PoE) IN (802.3at/af)
Console Port	LAN Console port
Reset	To restore the factory default setting, press and hold the Reset Button for about 10 secs, and then release it. Located just above the RJ45 connector of WAN Port


2.3 AirDual-AC12, AWOD-12ACi, AWOD-30AXi Installation.

For the Outdoor CPE, they will be installed on a Pole or Wall based on the following steps:

Take the Clamp Hoop from the retail box and open it. Pull it through the back bracket of the Outdoor CPE and fix it to the pole. Make sure the CPE is facing the correct location and is mounted securely so it cannot move. When mounting on a flat surface (like a wall) please use two screws or bolts (not provided) and mount them up with the screw fixture holes in the back of the CPE bracket. Do not forget to get the connected to PoE LAN cable to power on the CPE.



Clamp Hoop

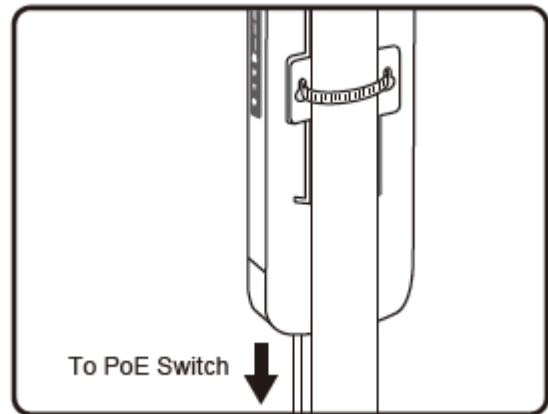

Chapter 3. Quick Installation Guide

3.1 AirDual-AC12, AWOD-12ACi, AWOD-30AXi, Web login Management.

This chapter will show you how to configure the basic functions of your AP within minutes.

Manual Network Setup – TCP/IP Configuration.


The default IP address of the CPE is 192.168.188.253, and the default subnet is 255.255.255.0. These values can be changed as you want. For this guide we will use the default values to introduce the webui.

Connect the CPE with your PC by plugging one end of an Ethernet cable in the LAN port of the CPE or into a free port on the PoE switch to which the CPE is also connected and the other end in the LAN port of PC. When the CPE powered by a PoE switch, you can connect to the CPE by connecting direct to LAN port of the CPE or by connecting to the same PoE switch. You can also use the supplied PoE Injector (AirDual-AC12 and AWOD-12ACi only) to power CPE when not using a PoE switch.

In the following sections, we'll introduce how to install and configure the TCP/IP correctly in Windows. And the procedures in other operating systems are similar. First, make sure your Ethernet Adapter is working, and refer to the Ethernet adapter manual if needed.

3.2 Configuring the IP Address Manually.

Using the LAN connection, you need to set the IP address of the TCP/IP property of the network card to 192.168.188.X (X is number of 2--252) first, so that the device and PC in the same IP segment, and set the subnet mask to 255.255.255.0, as shown in the following picture:

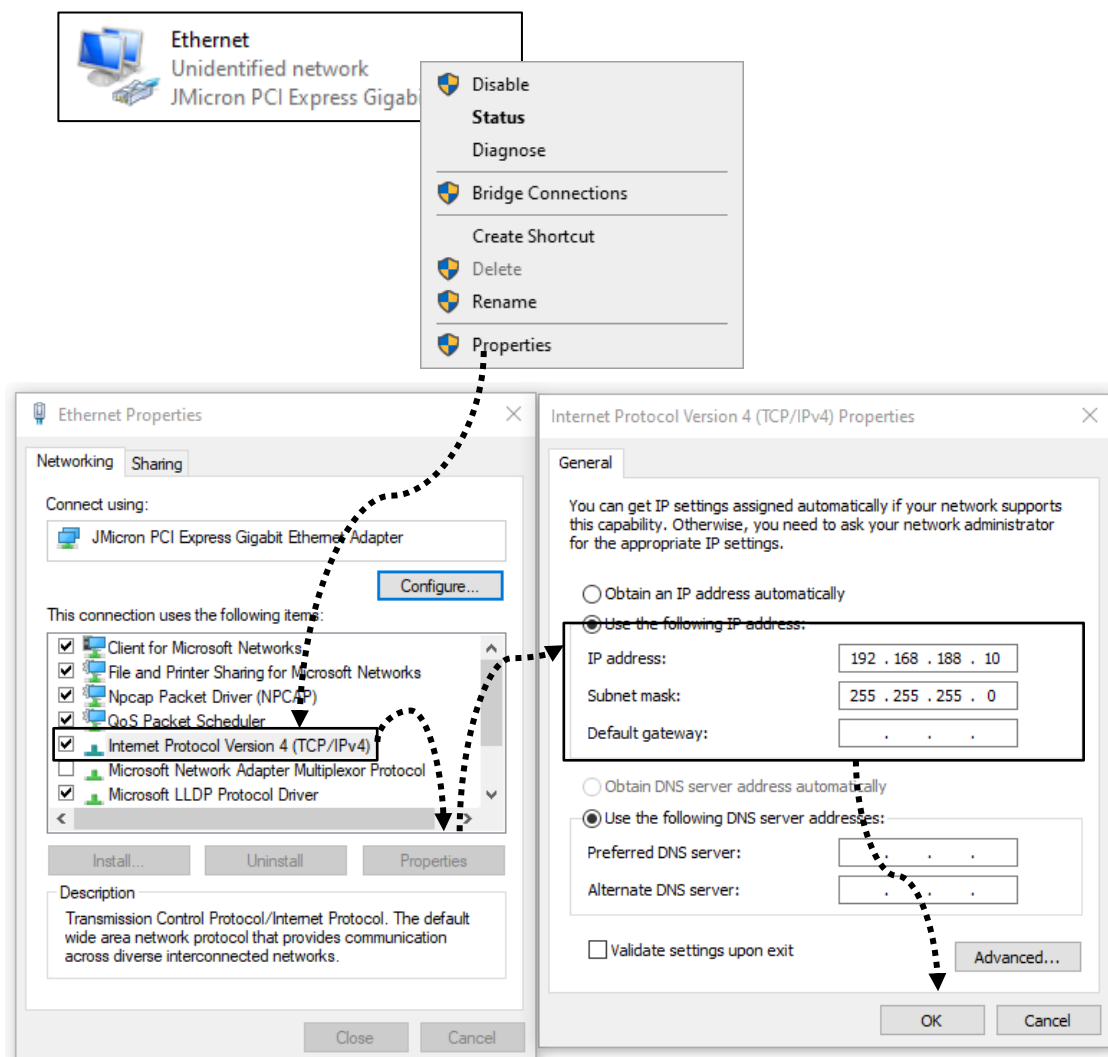

Now click OK to save your settings.

3.3 Starting Setup in the Web UI.

It is easy to configure and manage the CPE with a web browser.

Input 192.168.188.253 into the browser, and the login page will appear, the default login password is: admin.

When the CPE was connected to a PoE switch which also transfers IP address from a router connected to it. It could be that the IP Address of the CPE has changed to an IP address in your local range.

Note

The Webui images used in this guide differ from the actual Webui of the CPE used.

Some function shown in the Webui images in this guide could not be available / shown on your device.




To change the language settings from English to Spanish click on the “v” to open the menu. (Only for indoor Ceiling and inWall AP model).

The color and layout between the different models of CPEs can slightly different, but the operation is the same.

Chapter 4. Configure the CPE


4.1 Main Home Page.

The below web GUI and the topology used in this guide uses the inWall-U618AX/AirDual-AC12 as an example. It is easy to configure and manage the AP with the web browser. The default setting of the CPE is AP Mode. The default setting for operation is FAT mode, to view the FIT mode please see chapter 5.

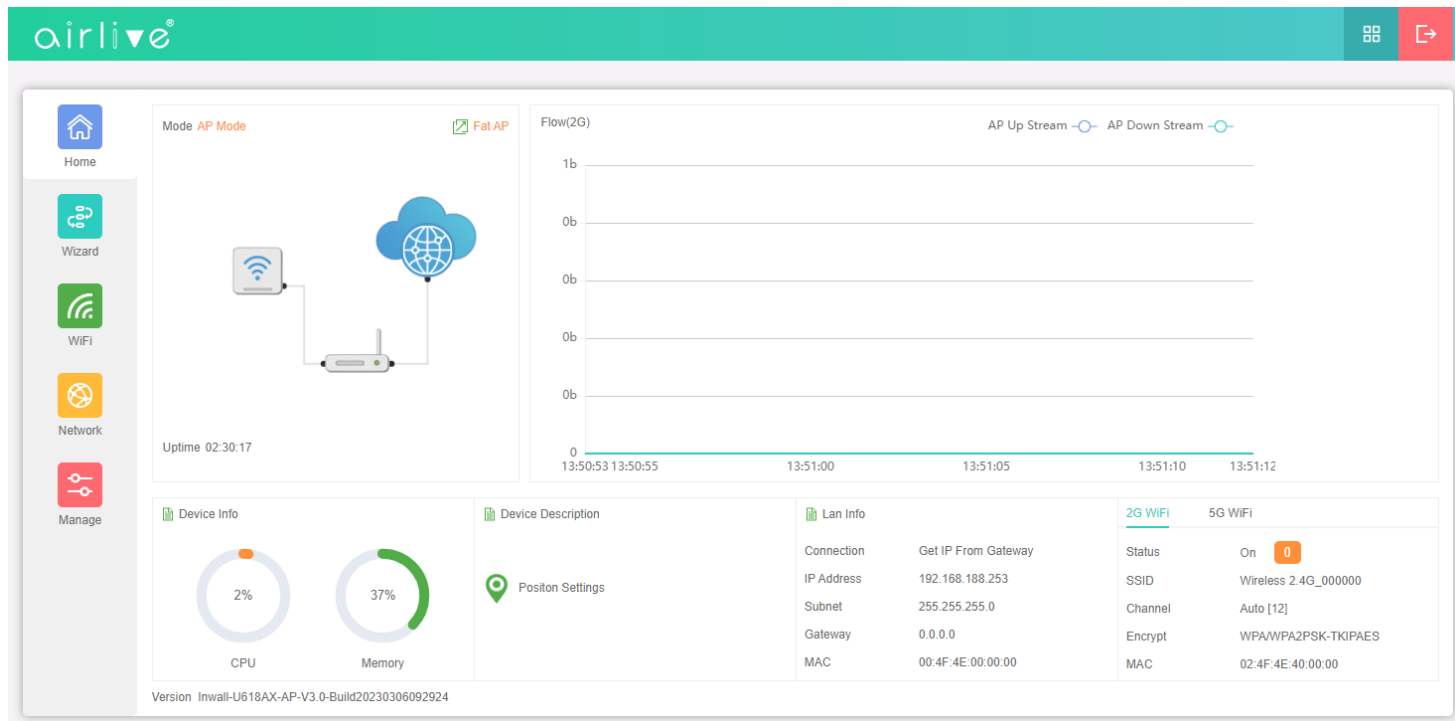

The page includes the following fields:

Object	Description
Mode	Shows the current mode status, AP or Gateway mode.
Fat AP/ Fit AP	Switch between Fat AP and Fit AP mode. (Fit mode is used with WLAN-64/128GM controller). The Fat and Fit mode is only available in AP Mode not Gateway Mode.
Device Info	Shows the CPU and Memory usage.
Device Description	You can enter the device description.
Flow (2.4/5G Wi-Fi) bps	Shows the Upstream/Downstream graph, select either 2.4G or 5Ghz
LAN Info	Shows the device IP mode, LAN IP, Subnet, Gateway and MAC address.
Wi-Fi Information	It shows the Wi-Fi status, SSID, Channel, Encryption, MAC address
Hardware accelerate	Only in Gateway Mode.
Version	Shows the current device firmware version.

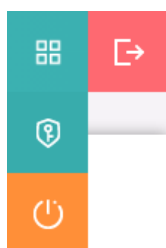


Reboot and Password Change:

Click on the Green icon with the 4 squares in the top right corner and a pulldown menu will appear. To change the Password, click on the lock icon and enter your new Password. To Reboot the CPE, click on the orange icon

4.2 Wizard Configuration.

Wizard: It instruct users to configure wireless AP's operation mode based on needs, there are three operation modes including AP, Gateway and Repeater Mode. Please confirm the operation mode first before starting the configuration. The default settings of the CPE is AP mode.

Clicking on Wizard the status page will pop up, for each operation mode there is an explanation for better application.

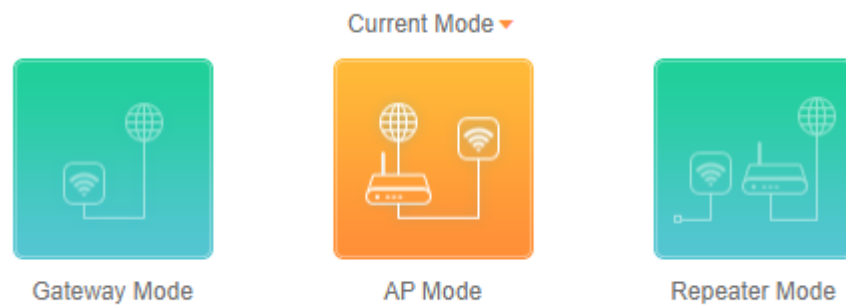**AP Mode:**

In this mode, the AP wireless interface and cable interface are bridging together. Without NAT, firewall and all network related functions.

Gateway Mode:

In this mode, the device is supposed to connect to internet via ADSL/Cable Modem. The NAT is enabled, and PCs in the LAN ports share the same IP to ISP through WAN port. The connection type can be setup in WAN page by using PPPoE, DHCP client or static IP.

In Gateway mode an additional Firewall menu will also appear. This menu is not visible in AP and Repeater mode.

Repeater Mode:

In this mode, the user can access wireless AP, Devices can be connected to other wireless networks using wireless, all interfaces are bridged together. Without NAT, firewall and all related functions.

4.3 Gateway Mode (Router).

Before changing the default AP mode to the Gateway mode, confirm your internet will be Static IP, PPPoE, or DHCP. Then click on the Gateway mode and the below image will pop-up. Please choose the right WAN settings mode, then click next to continue. Then configure the wireless parameters and click next.

Clicking next will complete the Gateway mode setting and show following picture:

Please Note: The CPE will restart for the changes to take effect.

The screenshot shows a 'Gateway Mode' configuration window with a teal header and a close button (X) in the top right. Below the header is a progress bar with three steps: 1, 2, and 3. Step 1 is highlighted. Below the progress bar is a 'WAN' section with a double-headed arrow icon. The 'Internet Mode' dropdown is set to 'Static IP'. A dropdown menu is open, showing three options: 'Static IP' (highlighted in teal), 'DHCP' (highlighted in light blue), and 'PPPoE'. Below the dropdown menu are input fields for 'IP Address', 'Subnet', 'Gateway', 'Primary DNS' (containing '8.8.8.8'), and 'Secondary DNS' (containing '8.8.4.4'). At the bottom right is a teal 'Next' button.

4.3.1 WAN Settings.

Static IP

If your ISP offers you a static IP Internet connection type, select "Static IP" and then enter IP address, subnet mask, default gateway and primary DNS information provided by your ISP in the corresponding fields.

The screenshot shows the 'Gateway Mode' configuration window. At the top, there is a progress bar with three steps, where the first step is active. Below this, the 'WAN' settings are displayed. The 'Internet Mode' is set to 'Static IP'. The following fields are filled with default or example values: IP Address (0.0.0.0), Subnet (255.255.255.0), Gateway (0.0.0.0), Primary DNS (8.8.8.8), and Secondary DNS (8.8.4.4). A 'Next' button is positioned at the bottom right of the configuration area.

The page includes the following fields:

Object	Description
IPAddress	Enter the WAN IP address provided by your ISP. Enquire your ISP if you are not clear
Subnet Mask	Enter WAN Subnet Mask provided by your ISP
Default Gateway	Enter the WAN Gateway address provided by your ISP
Primary DNS	Enter the necessary DNS address provided by your ISP
Second DNS	Enter the second DNS address provided by your ISP

4.3.2 WAN Settings.

PPPoE (ADSL)

Select PPPOE if your ISP is using a PPPoE connection and provided you wit an PPPoE username and password.

Gateway Mode

1 2 3

WAN

Internet Mode PPPoE

Username Please enter account.

Password Please enter password.

Server Name No Need, Don't fill

Service Name No Need, Don't fill

Next


The page includes the following fields:

Object	Description
Username	Enter the PPPoE Username provided by your ISP
Password	Enter the PPPoE Password provided by your ISP
Server Name	No Need, Don't fill
Service Name	No Need, Don't fill

4.3.3 WAN Settings.

DHCP


Choose "DHCP" and the router will automatically obtain IP addresses, subnet masks and gateway addresses from your ISP.

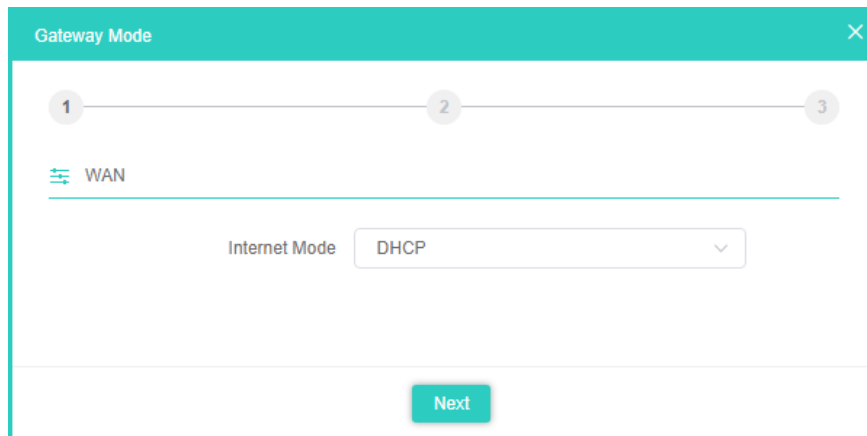

4.3.4 Wi-Fi Settings.

In the Wi-Fi settings the settings for the 2.4Ghz are first after these are done click next to setup the 5Ghz Wi-Fi settings.

Setup your own SSID, Wireless Mode, Channel, Encryption and Wi-Fi Password.

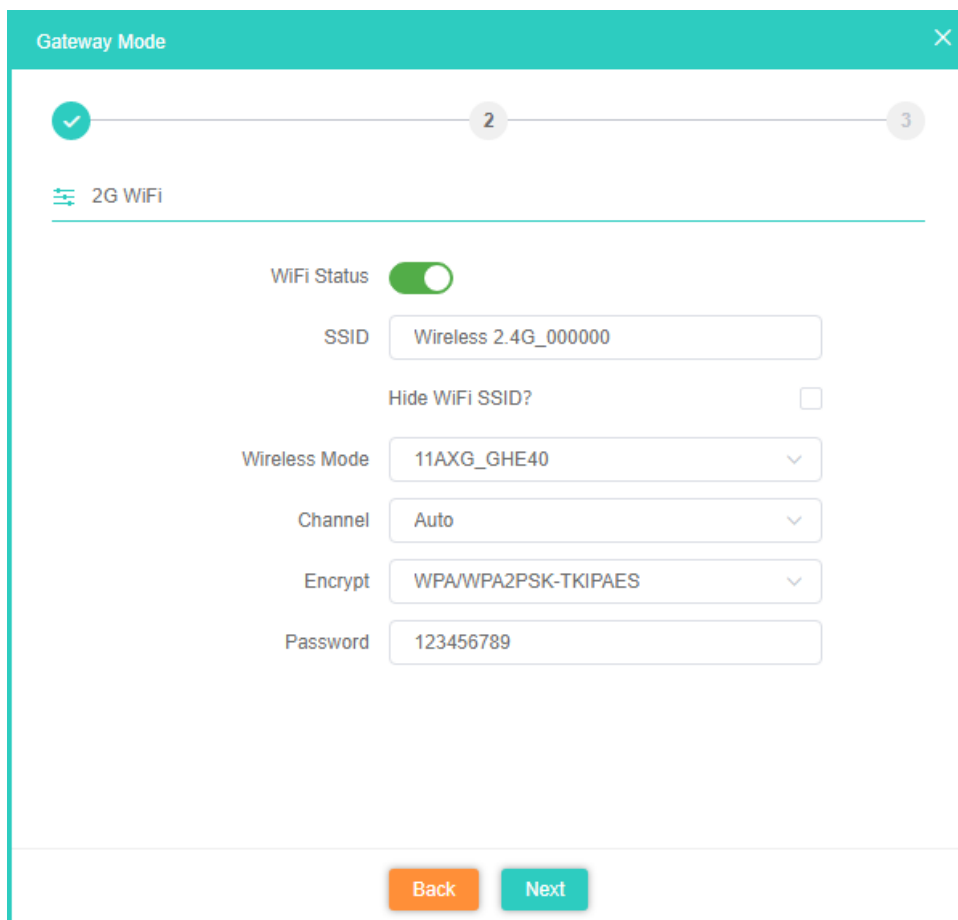


The page includes the following fields:

Object	Description
Wi-Fi Status	Select ON (Green) or OFF (Gray) to enable or disable Wireless LAN
SSID	This is the wireless network name. The default SSID is Wireless 2.4G_XXXXXX and Wireless 5.8G_XXXXXX. X is the last 6 numbers of the AP MAC address.
Hide your SSID	Select ON (Green) or OFF (Gray) to hide wireless LAN or not
Wireless Mode	Select the Wireless mode and Channel bandwidth, "20MHz" or "40MHz" or "80MHz", The "160Mhz" is only for the AX 3000Mbps model.
Channel	Select the operating channel you would like to use. The channel range will be changed by selecting a different domain.
Encryption	Select the wireless encryption.
Timed Reboot	Set the after how many days the AP should automatically restart.

Router Mode:

After the CPE has restarted the Gateway mode will be active.

The web GUI will now display the Gateway Mode and will have an additional Firewall menu on the left side. See Chapter 4.8 for information.

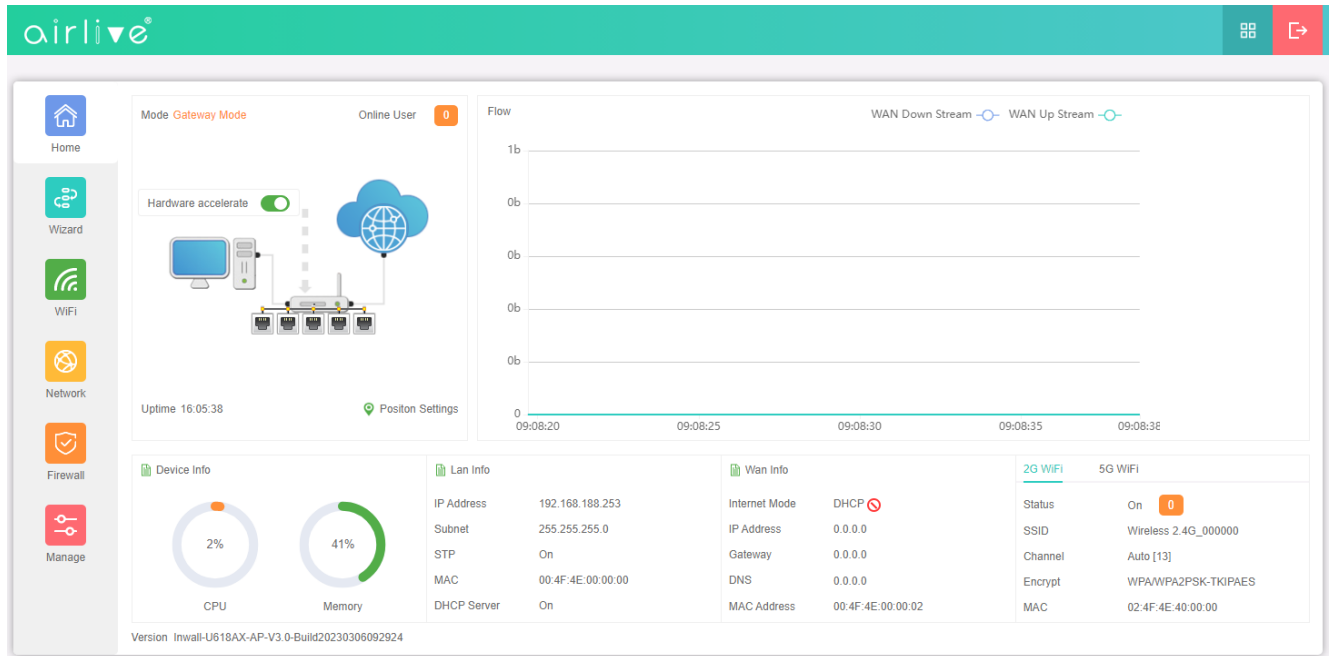

4.4 AP Mode.

The default mode of the CPE is AP mode. Select Static IP, Get IP from Gateway or Get IP from AC. When selecting the Get IP from AC you would need an AirLive WLAN-64/128GM Controller (sold separately).

In the AP mode, the AP wireless interface and cable interface bridge together.

The screenshot shows the 'AP Mode' configuration window. At the top, there is a progress bar with three steps: 1, 2, and 3. Step 1 is active. Below the progress bar, there is a 'LAN' section. Under 'LAN', there is a 'Connection' dropdown menu. The dropdown is open, showing three options: 'Static IP', 'Get IP From AC', and 'Get IP From Gateway'. The 'Get IP From Gateway' option is highlighted. At the bottom of the window, there is a 'Next' button.

The screenshot shows the 'AP Mode' configuration window. At the top, there is a progress bar with three steps: 1, 2, and 3. Step 2 is active. Below the progress bar, there is a 'LAN' section. Under 'LAN', there is a 'Connection' dropdown menu set to 'Static IP'. Below this, there are several input fields: 'IP Address' (192.168.188.253), 'Subnet' (255.255.255.0), 'Gateway' (No Need, Don't fill), 'Primary DNS' (8.8.8.8), and 'Secondary DNS' (8.8.4.4). At the bottom of the window, there is a 'Next' button.

The page includes the following fields:

Object	Description
Connection	Select "Static IP", "Get IP from Gateway" or "Get IP from AC for setting up device IP.
IP Address	Enter the CPE Static IP Address.
Subnet	Enter the network mask.
Gateway	Enter the default gateway IP Address.
Primary DNS	Enter the primary DNS IP Address, or not.
Secondary DNS	Enter the secondary DNS IP Address, or not.

4.4.1 Wi-Fi Settings.


In the Wi-Fi settings the settings for the 2.4Ghz are first after these are done click next to setup the 5Ghz Wi-Fi settings.

Setup your own SSID, Wireless Mode, Channel, Encryption and Wi-Fi Password.

The screenshot shows the 'AP Mode' configuration window. At the top, there is a progress bar with three steps: Step 1 (checked), Step 2 (current), and Step 3. Below the progress bar, the '2G WiFi' section is active. The settings are as follows:

- WiFi Status:** A toggle switch is turned on (green).
- SSID:** A text field containing 'Wireless 2.4G_000000'.
- Hide WiFi SSID?:** An unchecked checkbox.
- Wireless Mode:** A dropdown menu showing '11AXG_GHE40'.
- Channel:** A dropdown menu showing 'Auto'.
- Encrypt:** A dropdown menu showing 'WPA/WPA2PSK-TKIPAES'.
- Password:** A text field containing '123456789'.

At the bottom of the window, there are two buttons: 'Back' (orange) and 'Next' (teal).

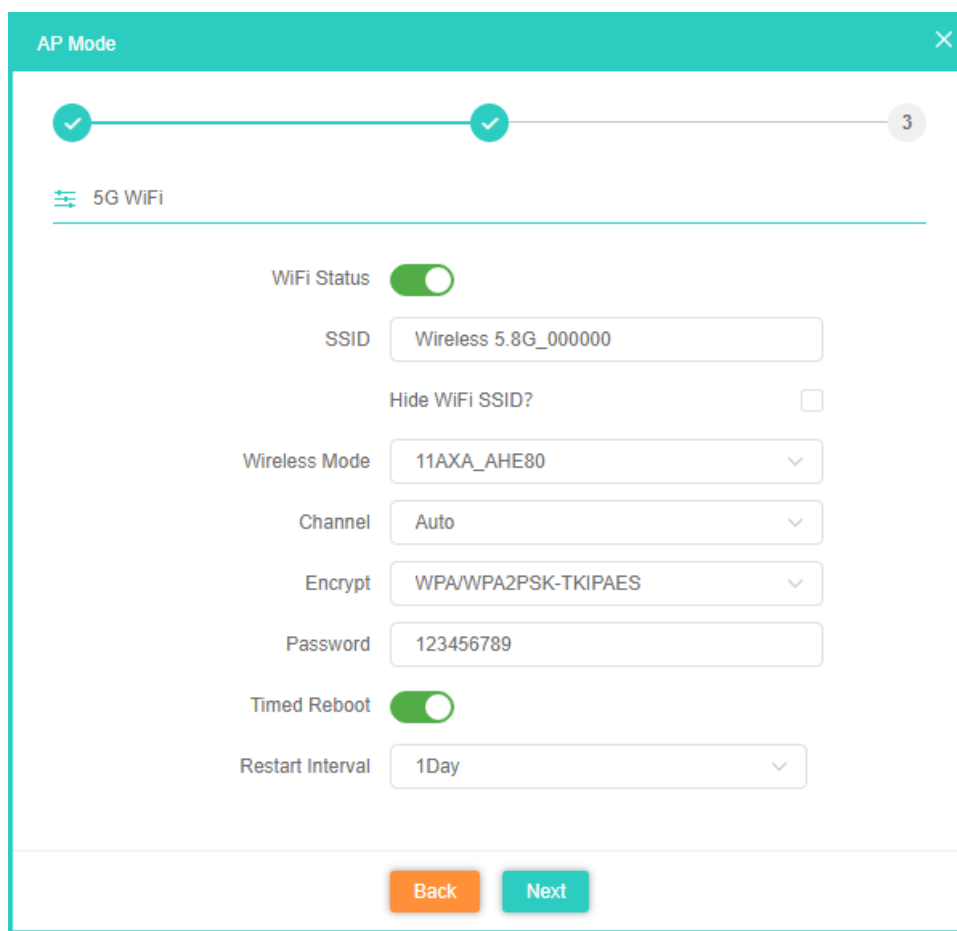

The page includes the following fields:

Object	Description
Wi-Fi Status	Select ON (Green) or OFF (Gray) to enable or disable wireless LAN.
SSID	This is the wireless network name. The default SSID is Wireless 2.4G_XXXXXX and Wireless 5.8G_XXXXXX. X is the last 6 numbers of the AP MAC address.
Hide your SSID	Select ON (Green) or OFF (Gray) to hide wireless LAN or not.
Wireless Mode	Select the Wireless mode and Channel bandwidth, "20MHz" or "40MHz" or "80MHz". The "160Mhz" is only for the AX 3000Mbps model.
Channel	Select the operating channel you would like to use. The channel range will be changed by selecting a different domain.
Encryption	Select the wireless encryption.
Timed Reboot	Set the after how many days the AP should automatically restart.

4.5 Repeater Mode.

After Selecting Repeater Mode. Select the Radio which the CPE must repeat. From the pull-down menu either 2.4G or 5G can be selected. Press Scan to show the root AP that you need to repeat and click on it.

After selecting the root AP, the MAC address of the root AP will be displayed at Lock BSSID. This MAC address now also be locked if needed by pressing the slide bar next to the MAC address. Enter the correct Wireless mode and Encryption. When Encryption is enabled a wireless Password field will also appear. Now click Next.

When building a pure Point-to-Point connection, please enabled the P2P button.

The page includes the following fields:

Object	Description
Select Network	Select "2.4G" or "5.8G" wireless LAN.
SSID	Enter the root AP's SSID or press "Scan" to select one.
Lock BSSID	Check to lock the root AP's MAC address.
Wireless Mode	Select the wireless mode (Channel Width) of the root AP.
Encryption	Select the wireless encryption type of the root AP.
Password	Enter the wireless password of the root AP
P2P	Enable switch for Point-to-Point function.

4.5.1 Wi-Fi Settings.

In the Wi-Fi settings the settings for the 2.4Ghz are first after these are done click next to setup the 5Ghz Wi-Fi settings. Setup your own SSID, Wireless Mode, Channel, Encryption and Wi-Fi Password. This is the wireless signal which the Repeater will send out to which clients can connect.

The page includes the following fields:

Object	Description
Wi-Fi Status	Select ON (Green) or OFF (Gray) to enable or disable wireless LAN.
SSID	This is the wireless network name. The default SSID is Wireless 2.4G_XXXXXX and Wireless 5.8G_XXXXXX. X is the last 6 numbers of the AP MAC address.
Hide your SSID	Select ON (Green) or OFF (Gray) to hide wireless LAN or not.
Wireless Mode	Select the Wireless mode and Channel bandwidth, "20MHz" or "40MHz" or "80MHz". The "160Mhz" is only for the AX 3000Mbps model.
Encryption	Select the wireless encryption.
Password	Enter the wireless password.
Timed Reboot	Set after how many days the AP should automatically restart.

4.5.2 LAN Settings.

Select Static IP, Get IP from Gateway. When selecting from Gateway the device will get an IP address from the main Gateway. When selecting Static IP the CPE will have a fixed IP in the network.

The page includes the following fields:

Object	Description
Connection	Select "Static IP", "Get IP from Gateway" for setting up device IP.
IP Address	Enter the CPE Static IP Address.
Subnet	Enter the network mask.
Gateway	Enter the default gateway IP Address.
Primary DNS	Enter the primary DNS IP Address, or not.
Secondary DNS	Enter the secondary DNS IP Address, or not.


Finish Setup

Click Next, and prompt will ask you to reboot the device. After pressing "Ok" the CPE will restart with the new settings.

Repeater Mode:

After the CPE has restarted the Repeater mode will be active.

The web GUI will now display the Repeater Mode and will have the additional Repeater signal information on the home page.

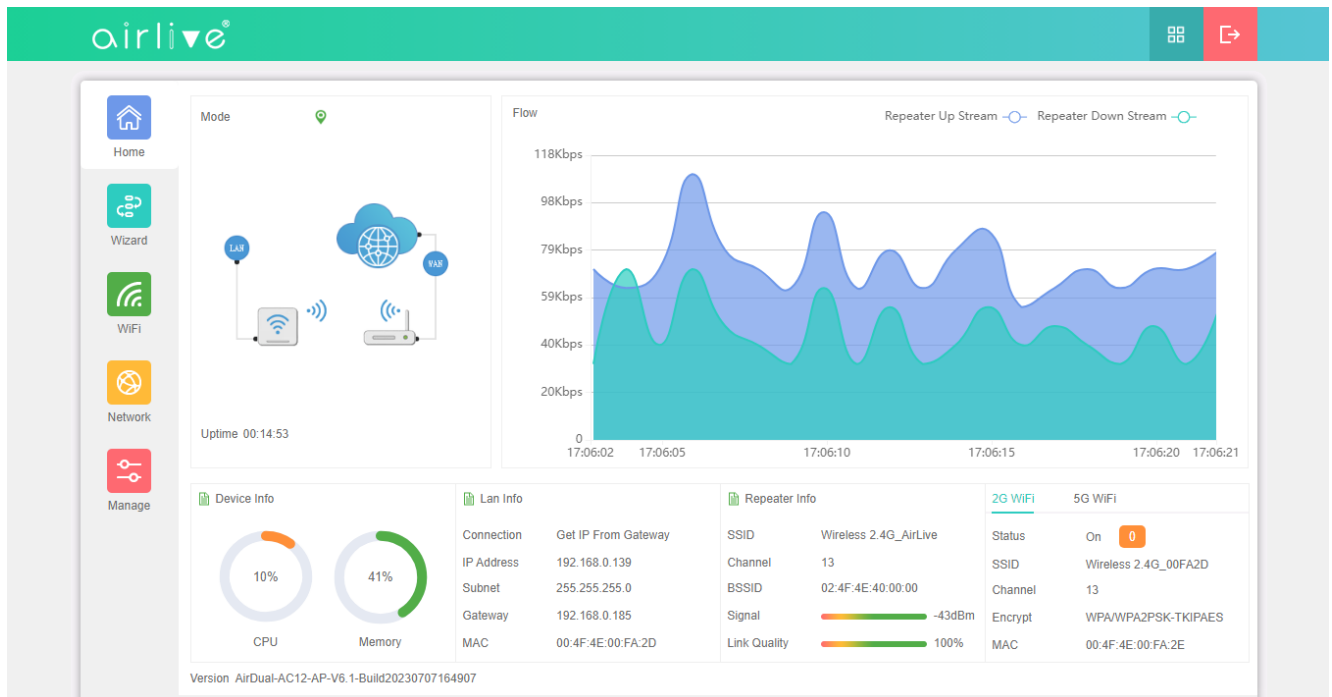

4.6 Wi-Fi

In Wi-Fi setting you can setup the 2.4Ghz and 5Ghz setting, MAC ACL, Wi-Fi Timer and Advanced settings.

Basic Wi-Fi settings for 2.4Ghz and 5Ghz. Setup your own SSID, Wireless Mode, Channel, Encryption and Wi-Fi Password, Max Station, TX Power and VLAN.

The screenshot displays the 'WiFi' configuration page for the 2.4GHz band. The left sidebar contains navigation icons for Home, Wizard, WiFi, Network, and Manage. The top navigation bar has tabs for WiFi, MAC ACL, and WiFi Timer. Below these are sub-tabs for 2G WiFi, 5G WiFi, and Advanced. The main content area shows the following settings:

- WiFi Status: ☒ (On)
- WiFi Analyzer: [WiFi Analyzer](#)
- Enable VAP: ☐ VAP 1 ☐ VAP 2 ☐ VAP 3
- SSID:
- Hide WiFi SSID?: ☐
- Wireless Mode:
- Channel:
- Encrypt:
- Password:
- Max Station: (0 to 256,0 means no limit)
- TX Power:
- VLAN: ☐

An 'Apply' button is located at the bottom right of the settings area.

The screenshot displays the 'WiFi' configuration page for the 5GHz band. The interface is identical to the 2.4GHz page, but the '5G WiFi' sub-tab is selected. The settings are as follows:

- WiFi Status: ☒ (On)
- WiFi Analyzer: [WiFi Analyzer](#)
- Enable VAP: ☐ VAP 1 ☐ VAP 2 ☐ VAP 3
- SSID:
- Hide WiFi SSID?: ☐
- Wireless Mode:
- Channel:
- Encrypt:
- Password:
- Max Station: (0 to 256,0 means no limit)
- TX Power:
- VLAN: ☐

An 'Apply' button is located at the bottom right of the settings area.

The page includes the following fields:

Object	Description
Wi-Fi Status	Select ON (Green) or OFF (Gray) to enable or disable wireless LAN.
SSID	This is the wireless network name. The default SSID is Wireless 2.4G_XXXXXX and Wireless 5.8G_XXXXXX. X is the last 6 numbers of the AP MAC address.
Hide your SSID	Select ON (Green) or OFF (Gray) to hide wireless LAN or not.
Wireless Mode	Select the Wireless mode and Channel bandwidth, "20MHz" or "40MHz" or "80MHz".
Channel	Select the operating channel you would like to use. The channel range will be changed by selecting a different domain.
Encryption	Select the wireless encryption.
Password	Enter your wireless password
Max Station	Set the maximum number of clients that can connect to the CPE
TX-Power	Select the output power of the CPE
VLAN	Set the VLAN-ID for the CPE (between 3~4094)
Wi-Fi Analyzer	Press this button to analyze local area wireless signal.

4.6.1 VAP


Select VAP1~VAP3 to enable the virtual AP. Both the 2.4Ghz and 5Ghz have 3 virtual ap's

The page includes the following fields:

Object	Description
Wi-Fi Status	Check mark VAP1~3 to enable them
SSID	This is the wireless network name. The default SSID is Wireless 2.4G Vap1_XXXXXX and Wireless 5.8G Vap1_XXXXXX. X is the last 6 numbers of the AP MAC address. The SSID will have Vap2/3 in its name when Vap2 and 3 are enabled
Hide your SSID	Select ON (Green) or OFF (Gray) to hide wireless LAN or not.
Encryption	Select the wireless encryption. The default is "None".
VLAN	Set the VLAN-ID for the CPE (between 3~4094)


4.6.2 Wi-Fi Analyzer

Press this button to analyze the local area to see which wireless channels are in use. Both the 2.4Ghz and the 5Ghz have their own Wi-Fi Analyzer. The straight vertical red line indicate the current channel used by the CPE.

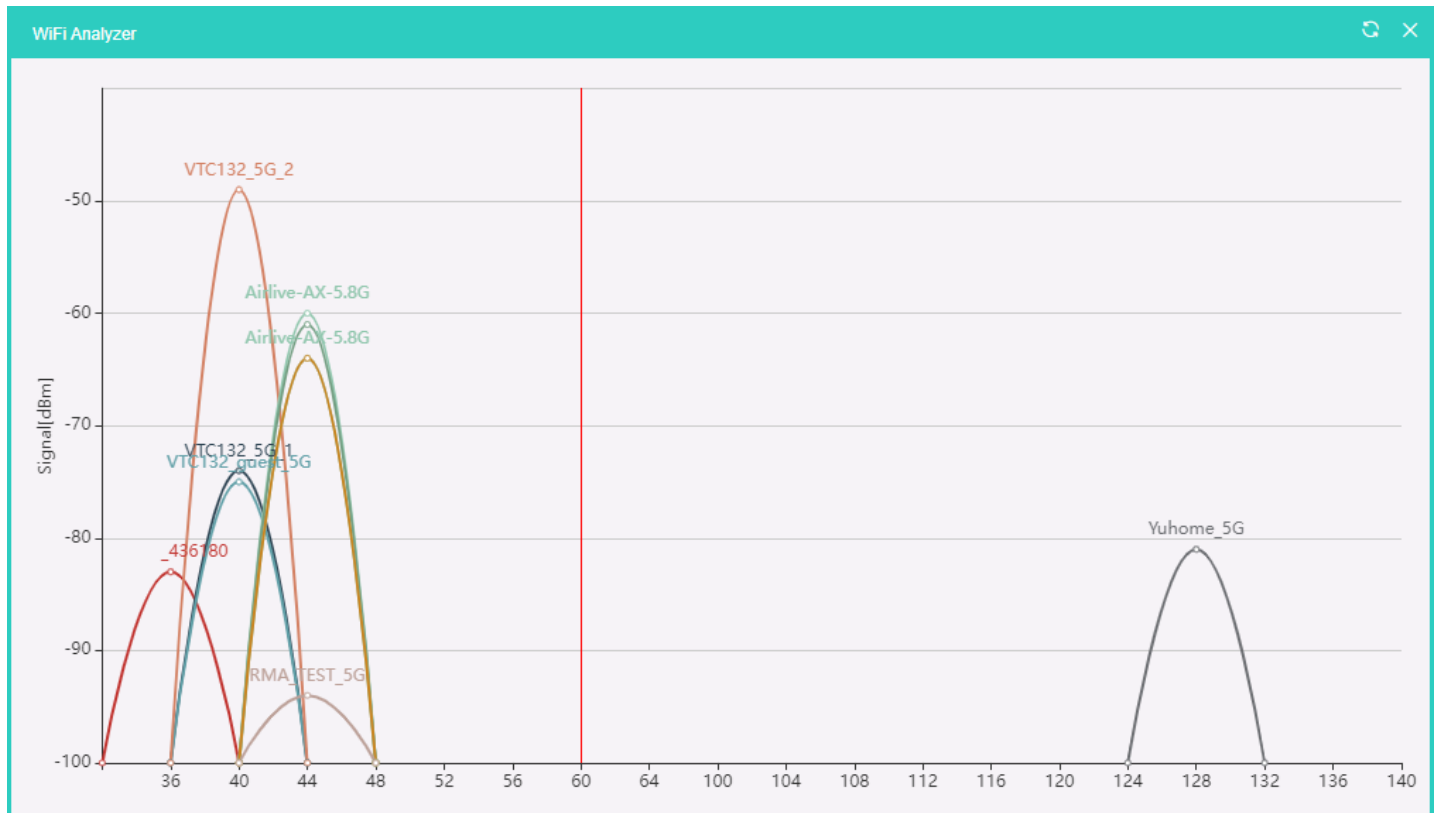

4.6.3 MAC ACL

Allow or deny the users access into this CPE based on MAC address.

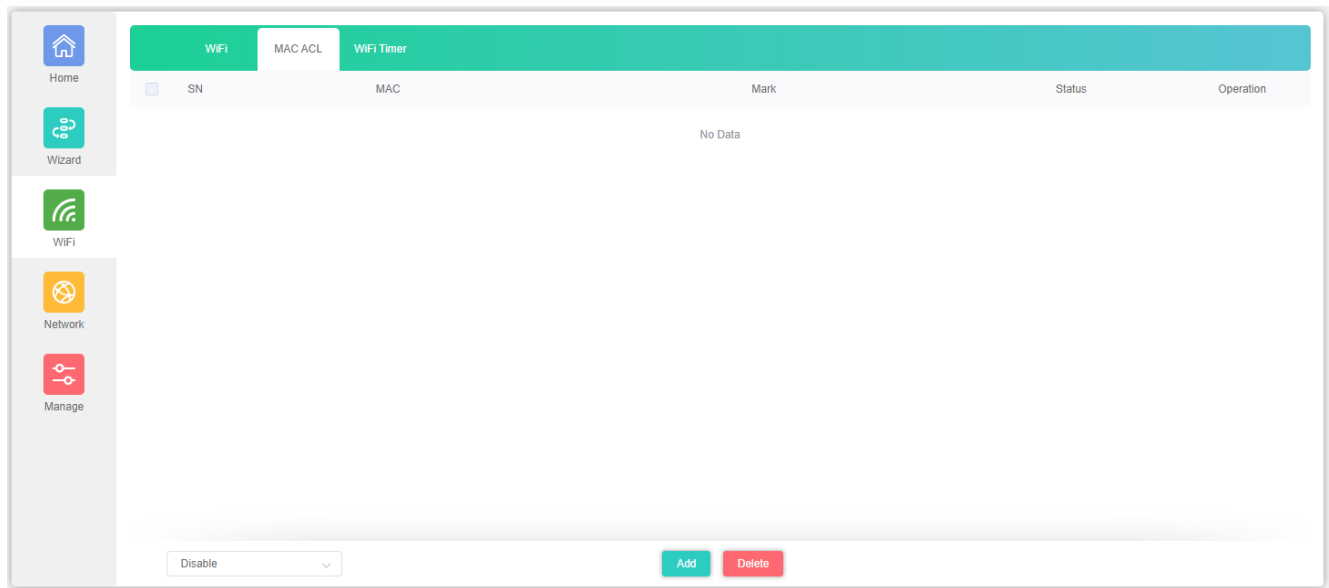


The page includes the following fields:

Object	Description
Add	Press the “Add” button to add end-device that is scanned from wireless network and mark them.
Delete	Press the “Delete” button to delete device from list.
ACL Status	Select the rule of ACL, default is Disable. Blacklist: Prohibited rules within the device through

MAC ACL Status

Select to enable or disable the ACL rule.

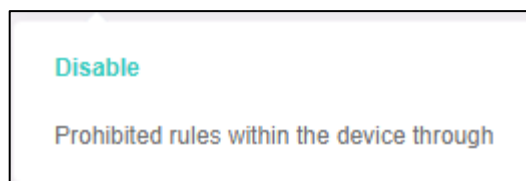

4.6.4 Wi-Fi Timer

Enable Wi-Fi Timer to turn off the SSID on a specified time.

The page includes the following fields:

Object	Description
Wi-Fi Timer	Select ON (Green) or OFF (Gray) to enable or disable timer.
Time Frame	Choose the Start and End time frame

4.6.5 Repeater (This function will only appear when the CPE is in Repeater Mode)


On this page it is possible to change the connection to the root AP. See XX for more detail.

The page includes the following fields:

Object	Description
Select Network	Select "2.4G" or "5.8G" wireless LAN.
SSID	Enter the root AP's SSID or press "Scan" to select one.
Lock BSSID	Check to lock the root AP's MAC address.
Wireless Mode	Select the wireless mode (Channel Width) of the root AP.
Encryption	Select the wireless encryption type of the root AP.
Password	Enter the wireless password of the root AP
P2P	Enable switch for Point-to-Point function.

4.6.6 Advanced

Advanced Settings allows to change the parameters of the CPEs. Country Region lets you select there different Wi-Fi regions, please select the one which is valid in your country of use.

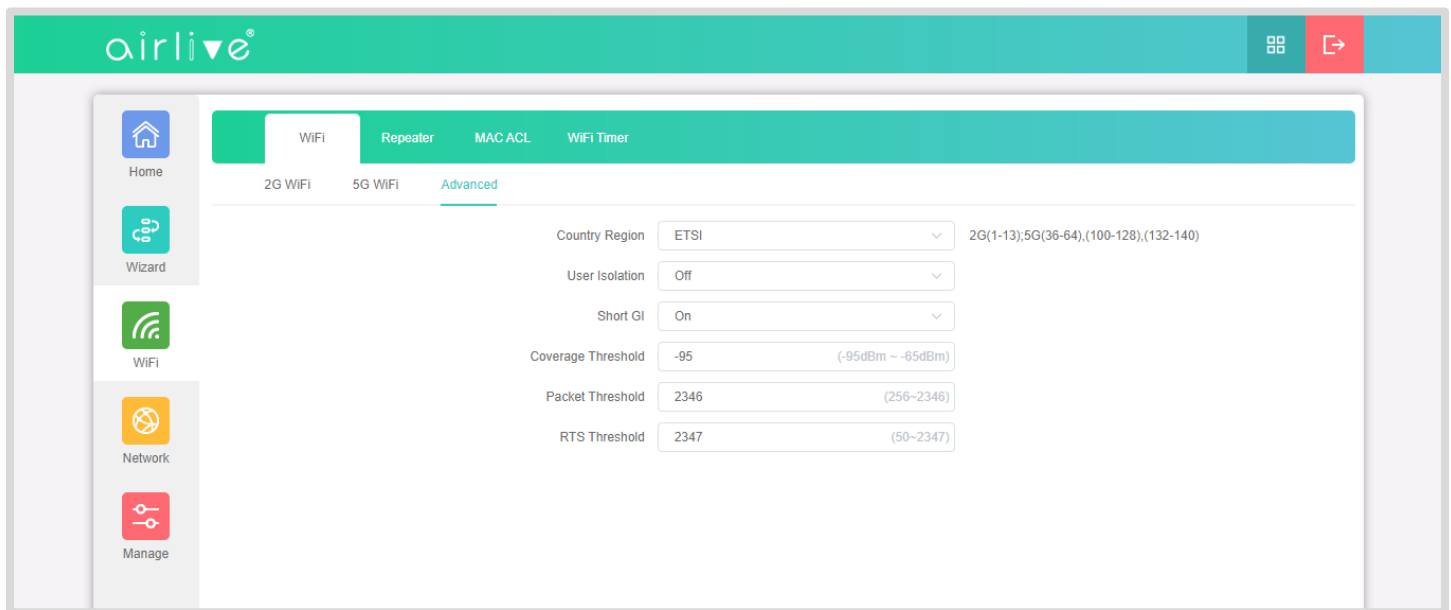

The page includes the following fields:

Object	Description
Country Region	Select your region valid in your area of use.
User Isolation	Enable it to isolate each connected wireless client so that they cannot access mutually.
Short GI	Guard intervals are used to ensure that distinct transmissions do not interfere with one another.
Coverage Threshold	The coverage threshold is to limit the weak signal of clients occupying session. The default is -95dBm.
Packet Threshold	When the length of a data packet exceeds this value, the router will send an RTS frame to the destination wireless node, and the latter will reply with a CTS frame, and thus they are ready to communicate. The default value is 2346.
RTS Threshold	Enable or Disable RTS/CTS protocol. It can be used in the following scenarios and used by Stations or Wireless AP. 1)When medium is too noisy or lots of interferences are present. If the AP/Station cannot get a chance to send a packet, the RTS/CTS mechanism can be initiated to get the packet sent. 2)In mixed mode, the hidden node problem can be avoided. The default value is 2347.

4.7 Network (AP Mode)

The Network settings for the AP Mode and Gateway Mode differ.

First shown is the AP Mode for the Network Settings for the Gateway Mode see chapter 4.7.

In AP mode only LAN Settings and Cloud are available.

4.7.1 LAN Settings

Select the Connection, Static IP, Get IP from Gateway, Get IP from AC. To use the option, Get IP from AC an AirLive WLAN-64/128GM Wireless Controller is needed.


The page includes the following fields:

Object	Description
Connection	Select "Static IP", "Get IP from Gateway" or "Get IP from AC for setting up device IP.
IP Address	Enter the CPE Static IP Address.
Subnet	Enter the network mask.
Gateway	Enter the default gateway IP Address.
Primary DNS	Enter the primary DNS IP Address, or not.
Secondary DNS	Enter the secondary DNS IP Address, or not.

4.7.2 Cloud

By default, the Cloud setting is turned on. When this settings is turned on the CPE can be added to the AirCloud platform. The AirCloud platform allows you to remote control the CPEs via the Cloud.

See www.airlive.com for more information about the AirCloud.

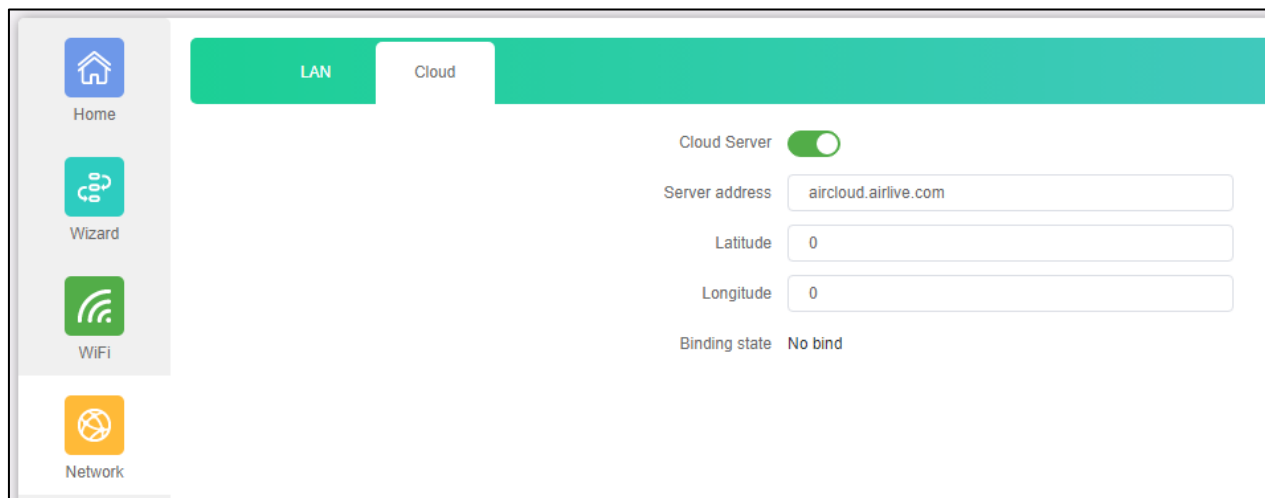

Home

Wizard

WiFi

Network

LAN Cloud

Cloud Server ☒

Server address

Latitude

Longitude

Binding state


4.8 Network (Gateway Mode)

The Network settings for the AP Mode and Gateway Mode differ.

In Gateway Mode next to LAN Settings and Cloud, Gateway Mode also has Static DHCP and WAN settings .

4.8.1 LAN Settings

Enter the IP setting for the CPE.

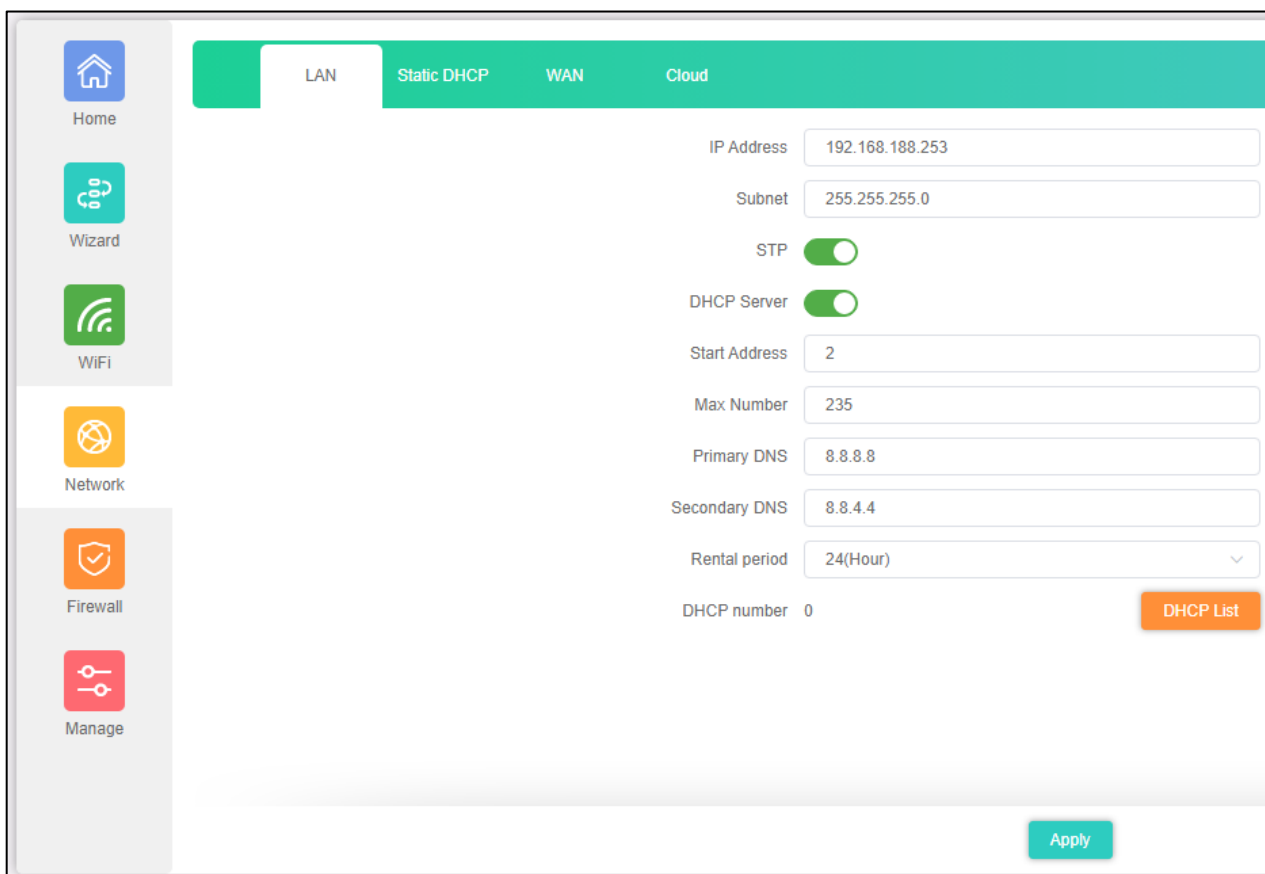

Home

Wizard

WiFi

Network

Firewall

Manage

LAN Static DHCP WAN Cloud

IP Address

Subnet

STP ☒

DHCP Server ☒

Start Address

Max Number

Primary DNS

Secondary DNS

Rental period

DHCP number

DHCP List


Apply

The page includes the following fields:

Object	Description
IP Address	Enter the CPE Static IP Address.
Subnet	Enter the network mask.
STP	Enable or Disable Spanning Tree (Default is on)
DHCP Server	Enable or Disable the CPE DHCP Server (Default is on)
Start Address	Start IP Address of DHCP Server
Max Number	Maximum number of IP Addresses given by the DHCP Server
Primary DNS	Enter the primary DNS IP Address, or not.
Secondary DNS	Enter the secondary DNS IP Address, or not.
Rental period	Lease time of a given IP Address
DHCP Number	Number of active clients
DHCP List	Detail list of active clients

4.8.2 Static DHCP

Give a client on the network a fixed Static IP Address. Press Add to open the pop-up window.
Enter the IP Address of a client or press Scan to search the client on the network.
Enter a name for the client in the Mark field.

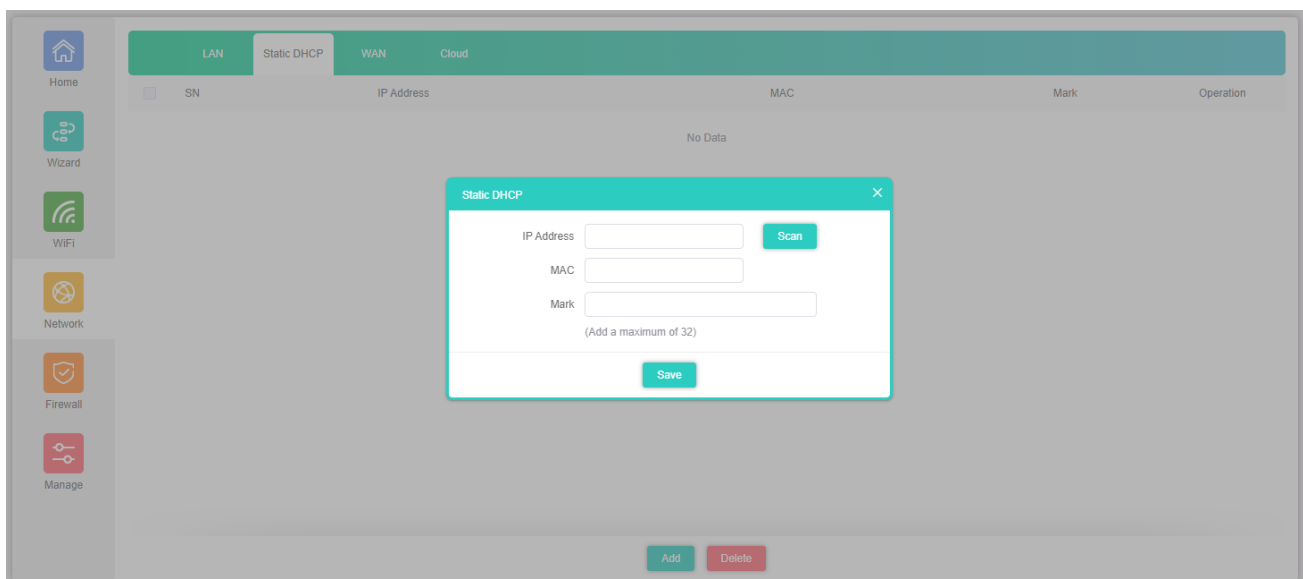

4.8.3 WAN

WAN Settings allows you setup the Internet Mode of the CPE, When using the WAN settings make sure your WAN port is connected to your Modem. The CPEs has 3 WAN settings, DHCP, Static IP and PPPoE.

4.8.4 WAN DHCP

The default setting for the WAN port is DHCP. Choose “DHCP” and the CPE will automatically obtain an IP Address, Subnet Mask and Gateway Address from your ISP.

The screenshot shows the WAN configuration page with the following fields and options:

- Internet Mode:** DHCP (selected)
- MTU:** 1500 (range 1400-1500)
- Set DNS Manually:** Enabled (toggle)
- Primary DNS:** 8.8.8.8
- Secondary DNS:** 8.8.4.4
- Band Type:** 500M Fiber
- Up:** 500000 Kbps
- Down:** 500000 Kbps
- Enable web server access on WAN port:** 8080 (1-65535)
- MAC Clone:** (button)
- Enable Ping Access on WAN:** (checkbox)
- Enable IPsec pass through on VPN connection:** (checkbox)
- Enable PPTP pass through on VPN connection:** (checkbox)
- Enable L2TP pass through on VPN connection:** (checkbox)
- Line Detection:** (checkbox)
- Apply:** (button)

The page includes the following fields:

Object	Description
Internet Mode	Select DHCP, Static IP or PPPoE
MTU	Maximum Transmission Unit. Default is 1500.
Set DNS Manually	Enable/Disable DNS Manually. Default is Enabled
Primary DNS	Enter the necessary DNS address provided by your ISP.
Secondary DNS	Enter the secondary DNS address provided by your ISP.
Band Type	Select the band type provided by your ISP.
Upstream	Enter limited upstream throughput, default is 500000 Kbps.
Downstream	Enter limited downstream throughput, default is 500000 Kbps.

4.8.5 WAN Advanced Settings

The WAN Advanced Settings are for 3 modes DHCP, Static IP and PPPoE.

The page includes the following fields:

Object	Description
Enable web server access on WAN port	Enable to access from WAN, default port is 8080
MACclone	Enable and scan to clone the MAC address
Enable Ping Access on WAN	Enable or Disable this function
Enable IPsec passthrough on VPN connection	Enable or disable IPsec to pass through IPsec communication data.
Enable PPTP passthrough on VPN connection	Enable or disable PPTP to pass through PPTP communication data.
Enable L2TP passthrough on VPN connection	Enable or disable L2TP to pass through L2TP communication data.
Line Detection	Enable to ping Host 1 and Host 2 IP. If ping fails, the WAN will be disconnected.

4.8.6 WAN Static IP

The default setting for the WAN port is DHCP. If your ISP offers you static IP Internet connection type, select "Static IP" and then enter IP address, subnet mask, default gateway and primary DNS information provided by your ISP in the corresponding fields.

For the Advanced Settings see Chapter 4.7.5

The screenshot shows the WAN configuration interface with the 'Static IP' tab selected. The left sidebar contains navigation icons for Home, Wizard, WiFi, Network, Firewall, and Manage. The main area has tabs for LAN, Static DHCP, WAN, and Cloud. Under the WAN tab, the 'Internet Mode' is set to 'Static IP'. Below this, there are input fields for IP Address (0.0.0.0), Subnet (255.255.255.0), Default Gateway (0.0.0.0), MTU (1500), Primary DNS (8.8.8.8), and Secondary DNS (8.8.4.4). A 'Band Type' dropdown is set to '500M Fiber'. At the bottom of these fields are 'Up' and 'Down' throughput settings, both set to 500000 Kbps. To the right of these fields are several checkboxes for advanced features: 'Enable web server access on WAN port' (with port 8080 and a scan button), 'MAC Clone', 'Enable Ping Access on WAN', 'Enable IPsec pass through on VPN connection', 'Enable PPTP pass through on VPN connection', 'Enable L2TP pass through on VPN connection', and 'Line Detection'. An 'Apply' button is located at the bottom right of the configuration area.

The page includes the following fields:

Object	Description
Internet Mode	Select DHCP, Static IP or PPPoE
IP Address	Enter the WAN IP Address provided by your ISP. Enquire your ISP if you are not clear.
Subnet	Enter WAN Subnet Mask provided by your ISP.
Default Gateway	Enter the WAN Gateway address provided by your ISP.
MTU	Maximum Transmission Unit. Default is 1500.
Primary DNS	Enter the necessary DNS address provided by your ISP.
Secondary DNS	Enter the secondary DNS address provided by your ISP.
Band Type	Select the band type provided by your ISP.
Upstream	Enter limited upstream throughput, default is 500000 Kbps.
Downstream	Enter limited downstream throughput, default is 500000 Kbps.

4.8.7 WAN PPPoE

The default setting for the WAN port is DHCP. Select PPPOE if your ISP is using a PPPoE connection and provided you with a PPPoE username and password.

For the Advanced Settings see Chapter 4.7.5

The screenshot shows the WAN configuration page with the following fields and options:

- Internet Mode:** Dropdown menu set to PPPoE.
- Username:** Text input field with placeholder "Please enter account."
- Password:** Text input field with placeholder "Please enter password."
- Server Name:** Text input field with placeholder "No Need, Don't fill".
- Service Name:** Text input field with placeholder "No Need, Don't fill".
- MTU:** Text input field set to 1452, with a range of (1400-1492) shown.
- Set DNS Manually:** Toggle switch turned on.
- Primary DNS:** Text input field set to 8.8.8.8.
- Secondary DNS:** Text input field set to 8.8.4.4.
- Band Type:** Dropdown menu set to 500M Fiber.
- Up:** Text input field set to 500000 Kbps.
- Down:** Text input field set to 500000 Kbps.
- Advanced Settings (unchecked):**
 - Enable web server access on WAN port (8080 (1-65535))
 - MAC Clone (with a Scan button)
 - Enable Ping Access on WAN
 - Enable IPsec pass through on VPN connection
 - Enable PPTP pass through on VPN connection
 - Enable L2TP pass through on VPN connection
 - Line Detection
- Apply:** Button at the bottom right.

The page includes the following fields:

Object	Description
Internet Mode	Select DHCP, Static IP or PPPoE.
Username	Enter the PPPoE User Name provided by your ISP.
Password	Enter the PPPoE password provided by your ISP.
Server Name	Enter the server description or not.
Service Name	Enter the service description or not.
MTU	Maximum Transmission Unit. Default is 1452.
Set DNS Manually	Enable/Disable DNS Manually. Default is Enabled
Primary DNS	Enter the necessary DNS address provided by your ISP.
Secondary DNS	Enter the secondary DNS address provided by your ISP.
Band Type	Select the band type provided by your ISP.
Upstream	Enter limited upstream throughput, default is 500000 Kbps.
Downstream	Enter limited downstream throughput, default is 500000 Kbps.

4.8.8 Cloud

By default, the Cloud setting is turned on. When this settings is turned on the CPE can be added to the AirCloud platform. The AirCloud platform allows you to remote control the CPEs via the Cloud.
See www.airlive.com for more information about the AirCloud.

The screenshot displays the AirLive web interface for configuring network settings. On the left, a sidebar provides quick access to various functions: Home, Wizard, WiFi, Network, Firewall, and Manage. The main content area is titled 'Cloud' and features a teal header with navigation tabs for LAN, Static DHCP, WAN, and Cloud. The Cloud settings are as follows:

- Cloud Server:** A toggle switch is turned on.
- Server address:** A text input field containing 'aircloud.airlive.com'.
- Latitude:** A text input field containing '0'.
- Longitude:** A text input field containing '0'.
- Binding state:** A label indicating 'No bind'.

An 'Apply' button is located at the bottom right of the settings area.



4.9 Firewall (Gateway Mode Only)

URL Filtering, IP Filter, MAC Filter, Port Mapping and DMZ will only appear when the CPE is set to Gateway Mode. Setup for the IP Group and Time Group which can be used in some of the Firewall features can be done in the Management menu (see chapter 4.9.7 and 4.9.8).

4.9.1 URL Filter

URL Filtering can block certain webpage for the clients. When enabled clients connected to the network will not be able to browse webpages which have been added to the URL Filter.

Click Add to open the Pop-up window to enter the URL and Time information. To Delete a URL Filter, select the URL Filter which was made before and check mark it, then press Delete.

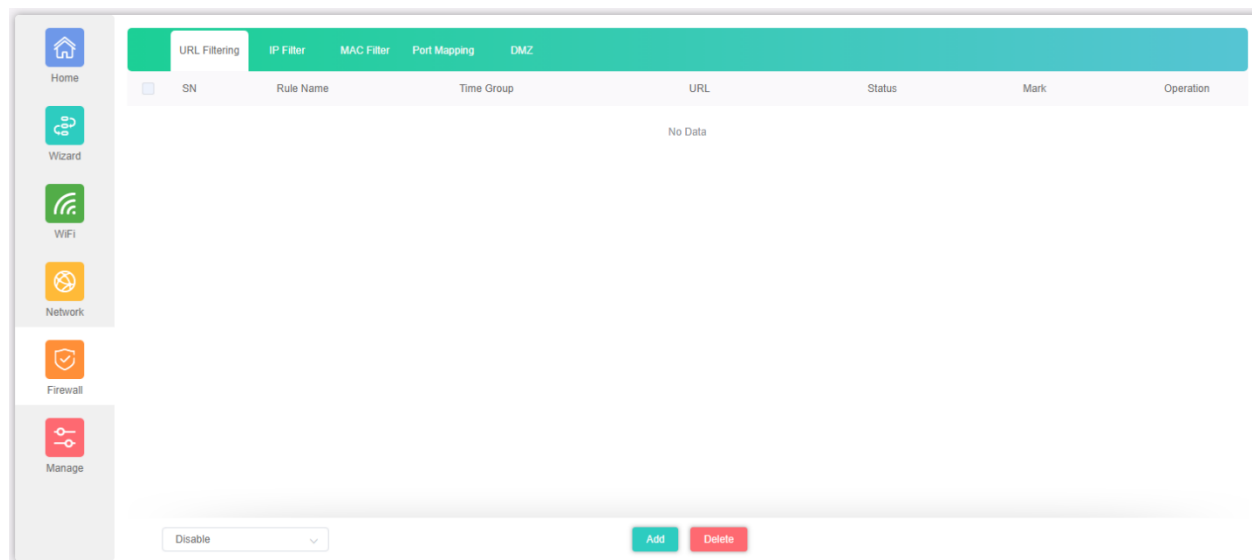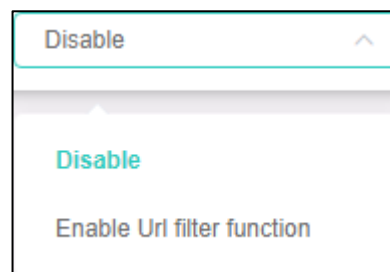Enable/disable URL filter function


The page includes the following fields:

Object	Description
Status	Select ON (Green) or OFF (Gray) to enable or disable
Rule Name	Enter the rule name, e.g. Black list
Time Group	Select Any or Custom to set up time range and work data.
URL	Enter the URL that you need to put in black list
Mark	Enter the mark string, or not
Save	Press Save to save the settings

4.9.2 IP Filter

IP Filtering can block or allow certain clients based on the IP Address, also a port or port range can be set for the IP Address together with the Protocol.

Click Add to open the Pop-up window to enter the IP and Time information. To Delete an IP Filter, select the IP Filter which was made before and check mark it, then press Delete.

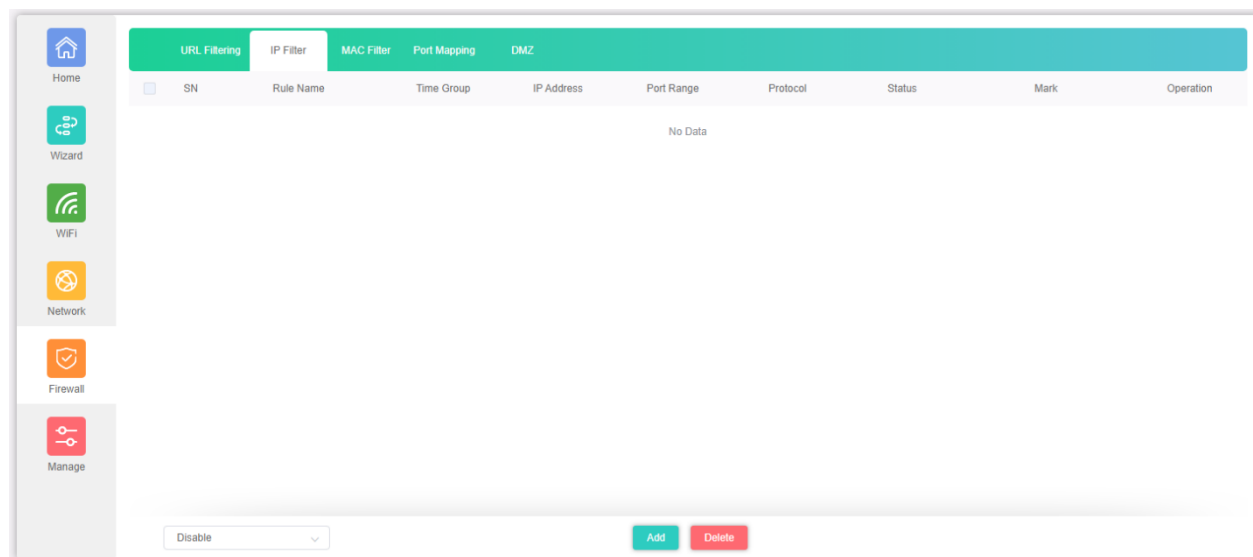

IP Filter

Status

Rule Name

Time Group

Any

Add

IP Group

Custom

Add

IP Address

-

Scan

Port Range

-

No empty,range:1-65535

Protocol

TCP

Mark

Add a maximum of 32

Save

The page includes the following fields:

Object	Description
Status	Select ON (Green) or OFF (Gray) to enable or disable
Rule Name	Enter the rule name, e.g. Black list
Time Group	Select Any or Customer to set up time range and work data.
IP Group	Select IP Group for adding IP by entering IP range or by scanning devices
IP Address	Enter the IP that you need to put in black or white list
Port Range	Enter the web port to access
Protocol	Select TCP, UDP orTCP+UDP
Mark	Enter the mark string, or not
Save	Save the settings

Disable

Disable

Allows the device to pass in the rule


Prohibited rules within the device through

Select the rule of IP Filtering, default is Disable.
Whitelist: Allow the devices to pass in the rule
Blacklist: Prohibited rules within the device through

4.9.3 MAC Filter

MAC Filtering can block or allow certain clients based on the MAC Address, also a port or port range can be set for the IP Address together with the Protocol.

Click Add to open the Pop-up window to enter the MAC and Time information. To Delete an MAC Filter, select the MAC Filter which was made before and check mark it, then press Delete.

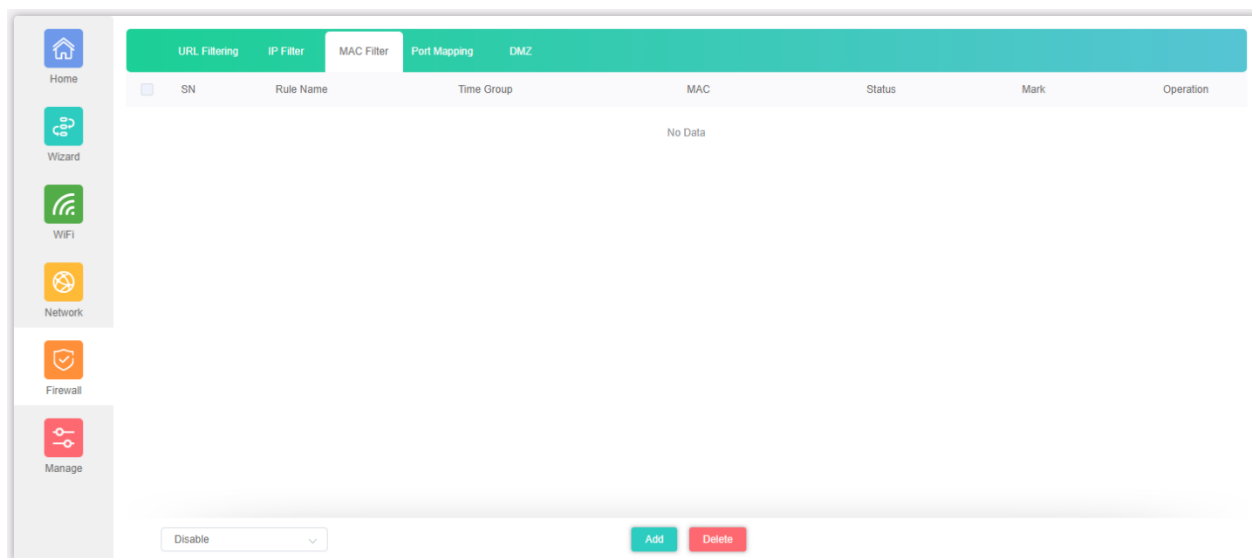

MAC Filter

Status ☒

Rule Name

Time Group Any

MAC

Mark

Add a maximum of 32

Disable

Disable

Allows the device to pass in the rule

Prohibited rules within the device through

Select the rule of IP Filtering, default is Disable.
Whitelist: Allow the devices to pass in the rule
Blacklist: Prohibited rules within the device through


The page includes the following fields:

Object	Description
Status	Select ON (Green) or OFF (Gray) to enable or disable
Rule Name	Enter the rule name, e.g. Black list
Time Group	Select Any or Custom to set up time range and work data.
MACAddress	Enter the MAC address that you need to put in black or white list
Mark	Enter the mark string, or not
Save	Save the settings.

4.9.4 Port Mapping

Port mapping allows extranet access to an intranet server. Enter the IP Address of the client for which you would like to open the External and Internal port.

Click Add to open the Pop-up window to enter the Port information. To Delete a Port Mapping, select the Port Mapping which was made before and check mark it, then press Delete.

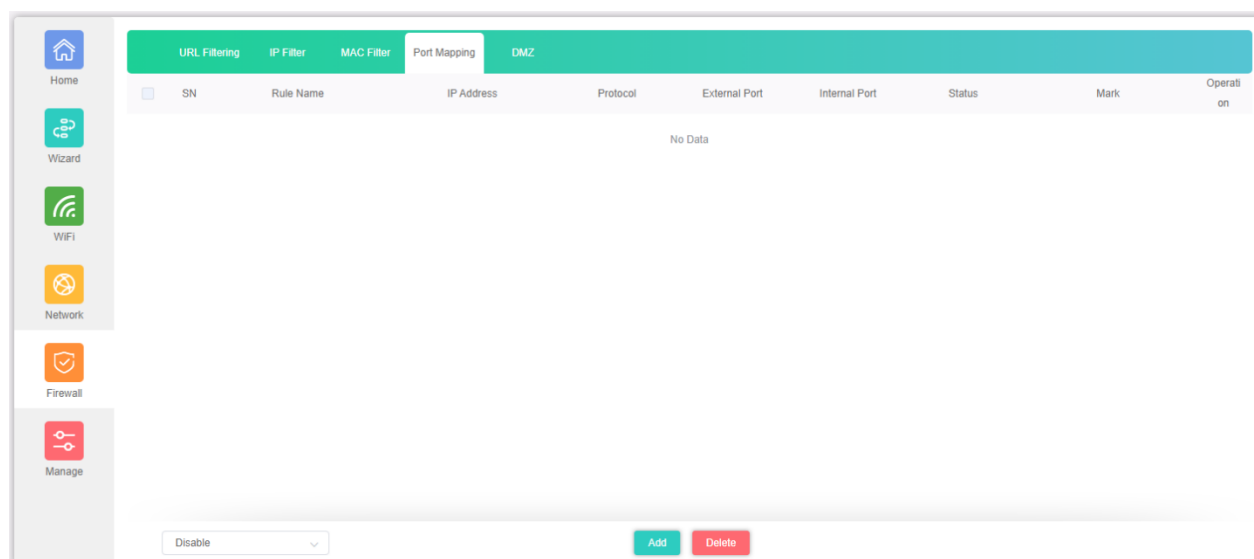

Port Mapping

Status

Rule Class

User Defined

Rule Name

Protocol

TCP

IP Address

Scan

External Port

-

No empty,range:1-65535

Internal Port

-

No empty,range:1-65535

Mark

Add a maximum of 32

Save

The page includes the following fields:

Object	Description
Status	Select ON (Green) or OFF (Gray) to enable or disable
Rule Class	Select the rule class, e.g. HTTP, HTTPS...
Rule Name	Enter the rule name, e.g. Black list
Protocol	Select TCP, UPD or TCP+UDP
IP Address	Enter the IP Address that you need for port forwarding
External Port	Enter the external port range
Internal Port	Enter the internal port range
Mark	Enter the mark string, or not
Save	Save the settings.

Disable


Disable

Enable Port Mapping Function

Enable/disable Port Mapping function

4.9.5 DMZ

Open the DMZ for a client IP Address.

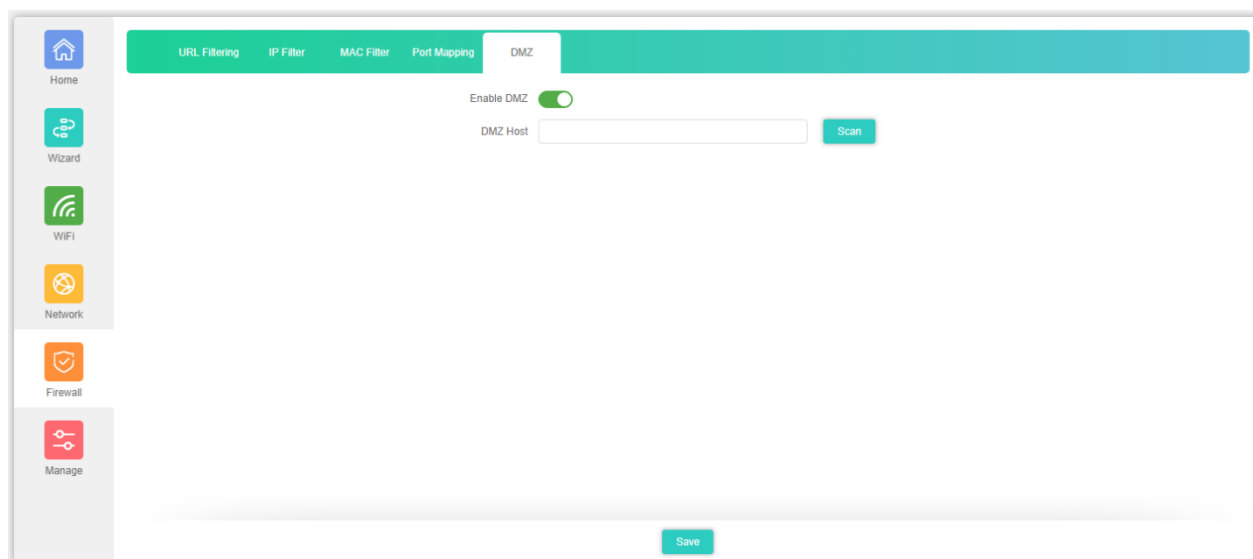

The screenshot shows the DMZ configuration page in the AirLive web interface. The sidebar on the left contains icons for Home, Wizard, WiFi, Network, Firewall, and Manage. The main content area has a teal header with tabs for URL Filtering, IP Filter, MAC Filter, Port Mapping, and DMZ. Below the tabs, there is a toggle switch for 'Enable DMZ' which is currently turned on. Below the toggle is a text input field for 'DMZ Host' and a 'Scan' button. At the bottom of the main content area is a 'Save' button.

The page includes the following fields:


Object	Description
Enable DMZ	Select Enable DMZ Host or Disable
DMZ Host IP	Enter the DMZ LAN IP for which you would like to open DMZ
Save	Save the setting.

4.10 Manage

The Management page allows for a backup, reset or upgrade of the CPE. Note that there is a difference between AP Mode and Gateway Mode. The functions QoS, IP Group, Time Group and DDNS will only appear when the CPE is in Gateway Mode.

4.10.1 Configure

You can save the config or restore the previously saved config or reset the device to its default configuration. Telnet can also be enabled, Note use this function with care!

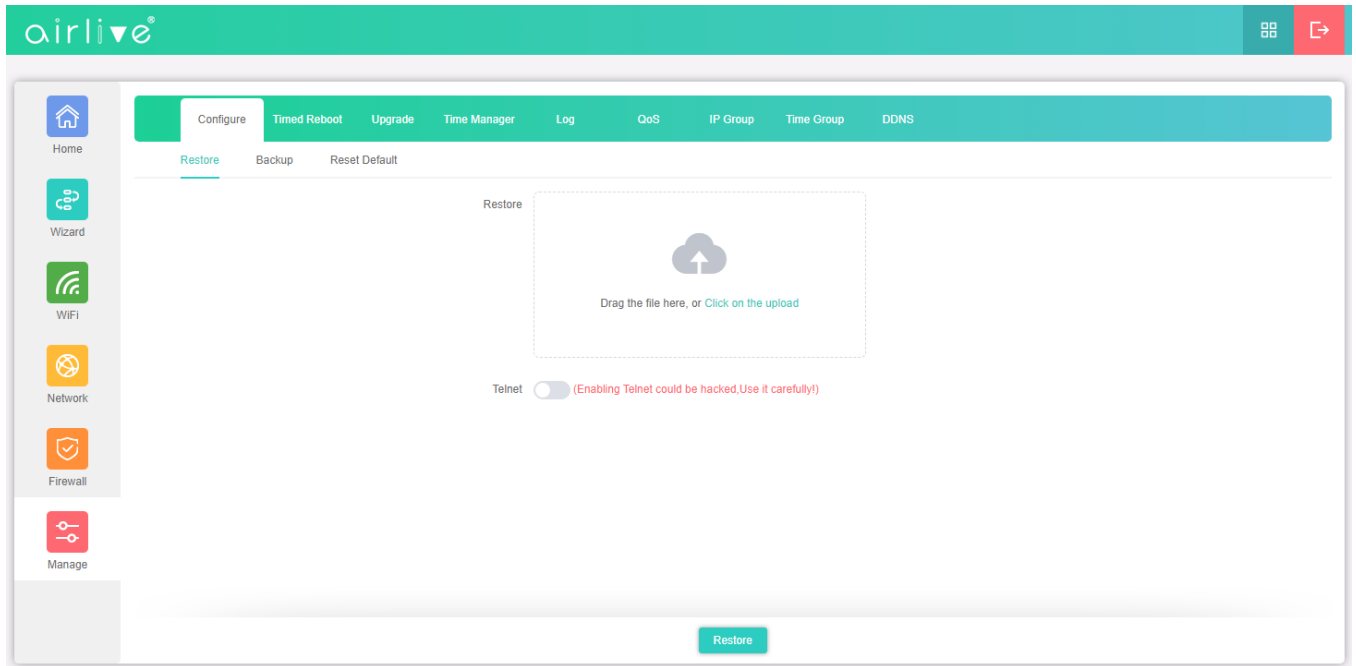

The page includes the following fields:

Object	Description
Backup	Save the configuration file to your computer
Restore	Reload the configuration from your computer
Reset Default	Restore the factory default settings, please press this button
Telnet	Enabling Telnet could be hacked, Use it carefully! Default is disable)

4.10.2 Timed Reboot

Set a schedule time on which the CPE would reboot, this can be every day or on an interval

The screenshot shows the 'Timed Reboot' configuration page in the AirLive web interface. On the left is a sidebar with icons for Home, Wizard, WiFi, Network, Firewall, and Manage. The top navigation bar includes tabs for Configure, Timed Reboot (active), Upgrade, Time Manager, Log, QoS, IP Group, Time Group, and DDNS. The main content area features a 'Timed Reboot' toggle switch, which is currently turned on. Below this, there are two radio button options: 'Reboot Time' (selected) and 'Restart Interval'. The 'Reboot Time' option has a dropdown menu set to 'Everyday' and a time selection dropdown set to '1:00'. The 'Restart Interval' option has a dropdown menu set to '1Day'. An 'Apply' button is located at the bottom right of the configuration area.


The page includes the following fields:

Object	Description
Timed Reboot	Select Enable or Disable to start schedule reboot
Reboot Time	Select reboot time form clock
Restart Interval	Select reboot duty by day

4.10.3 Upgrade

Browse the firmware file and click on upgrade. Wait till the upgrade is successful. The device will reboot automatically after successful firmware upgrade.

Version will show which firmware is currently on the CPE.

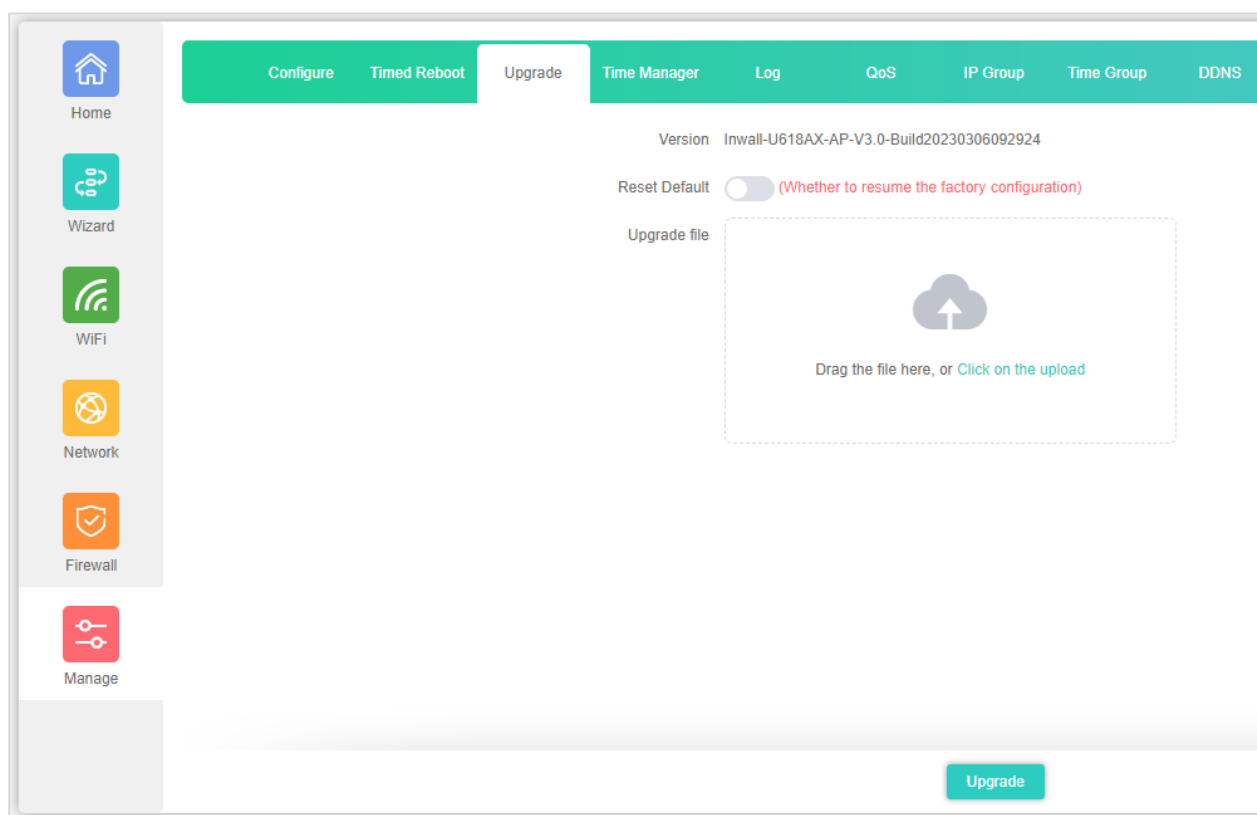

The page includes the following fields:

Object	Description
Choose File	Press to select the firmware file
Whether to resume the factory configuration	Select to reset the device to default when upgrading firmware
Upgrade	Press to upgrade the firmware

Note: Do not power off during the process of upgrading!!

4.10.4 Time Manager

Setup the system time, enable NTP Server and select the Time Zone for the CPE.

The screenshot displays the 'Time Manager' configuration interface. On the left is a sidebar with icons for Home, Wizard, WiFi, Network, Firewall, and Manage. The top navigation bar includes tabs for Configure, Timed Reboot, Upgrade, Time Manager (active), Log, QoS, IP Group, Time Group, and DDNS. The main configuration area shows the following settings:

- System Time:** 2023-03-14 09:30:55
- NTP Enable:** A green toggle switch is turned on.
- Time Zone Select:** A dropdown menu is set to '(GMT+08:00)Beijing, Chongqing, Hong Kong, Urumqi, Taipei'.
- Manual IP:** A toggle switch is turned off.
- NTP Server:** A dropdown menu is set to 'time.windows.com'.

An 'Apply' button is located at the bottom right of the configuration area.

The page includes the following fields:

Object	Description
System Time	Show system time of device
NTP Enable	Select Enable or Disable NTP function
Time Zone Select	Select time zone
Manual IP Settings	Enable to manual IP setting
NTP Server	Select NTP server

Note: If you want to use any function that needs scheduling, must enable NTP function.

4.10.5 Log

Review the CPE log, you can also enable Remote Log Service or export the log file.

The screenshot shows the 'Log' tab in the AirLive management interface. The sidebar on the left contains icons for Home, Wizard, WiFi, Network, Firewall, and Manage. The main content area displays a list of system logs. Each log entry consists of a timestamp (e.g., 2023/03/13 16:52:16), a location (e.g., Inwall-U618AX), a level (e.g., kern.warn), and a message (e.g., kernel: [54.270535] SetThermalProtectDutyCfg(): band_idx: 0, level_idx: 2, duty: 50). At the bottom of the log list, there are controls for the Log function (a green toggle switch), Remote Log Service (a grey toggle switch), a text input field for the server IP address (0.0.0.0), and four buttons: Apply, Export, Delete, and Refresh.

The page includes the following fields:


Object	Description
Log	Select ON/OFF to record log or not
Remote Log Service	Enable remote log server and enter the server IP Address
Export	Export a log.bin file to you PC
Delete	Press to delete all of the system log
Refresh	Press to refresh the system log

4.10.6 QoS (Gateway Mode only)

The QoS function only will work when the CPE is in Gateway Mode. QoS can limited the bandwidth for an IP Address or IP Group also the Time Group can setup to limit the bandwidth only at a certain time.

Click Add to open the Pop-up window to enter the IP and Time information. To Delete a QoS Rule, select the QoS Rule which was made before and check mark it, then press Delete.

Note when Hardware Accelerate is enabled on the Home Page of the CPE, the QoS function will not function correctly. When using QoS please turn off Hardware Accelerate.

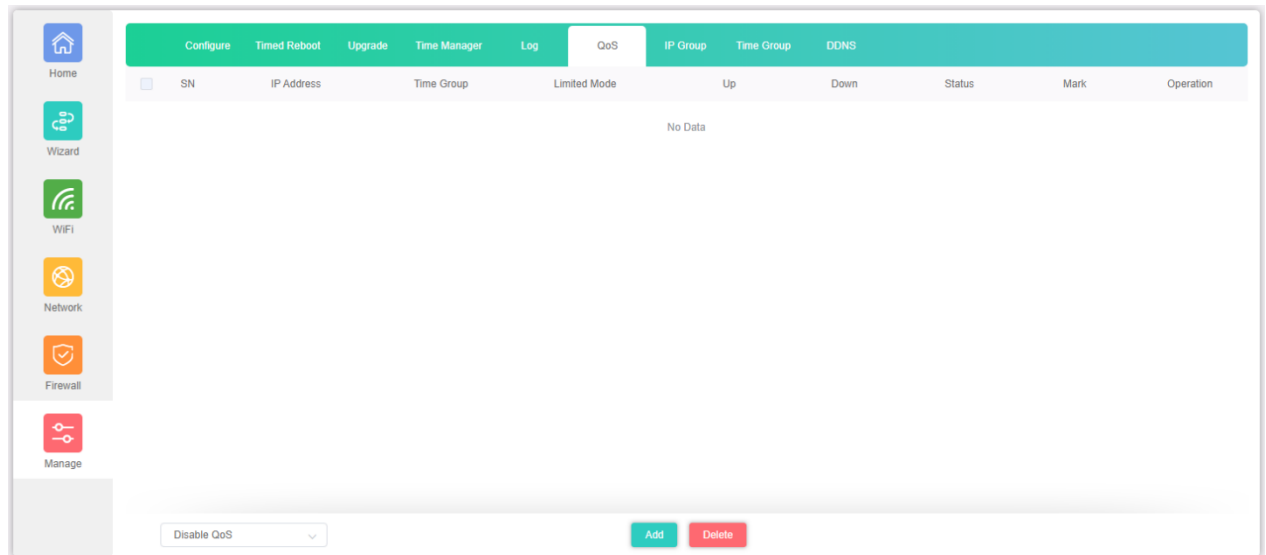

IP Filter

Status

IP Group

Custom

Add

IP Address

-

Scan

Time Group

Any

Add

Limited Mode

Shared Limited Bandwidth

Up

Kbps

Down

Kbps

Mark

Add a maximum of 32

Save

The page includes the following fields:

Object	Description
Status	Select enable or disable QoS control rule
IP Group	Select custom or Add an IP group
IP Address	Enter an IP address range or use scan to select
Time Group	Select any or custom or Add a Time group
Limited Mode	Select limited mode for shared limited bandwidth or exclusive limited bandwidth
Up	Enter the upstream limited for kbps
Down	Enter the downstream limited for kbps
Mark	Enter the mark string, or not
Save	Enter the mark string, or not

Disable QoS

Disable QoS


Enable QoS

Enable/disable QoS function

4.10.7 IP Group (Gateway Mode only)

IP Group, Setup up an IP Group which can be used in the QoS as well as in the Firewall menu.

Click Add to open the Pop-up window to enter the IP information. To Delete an IP Group, select the IP Group which was made before and check mark it, then press Delete.

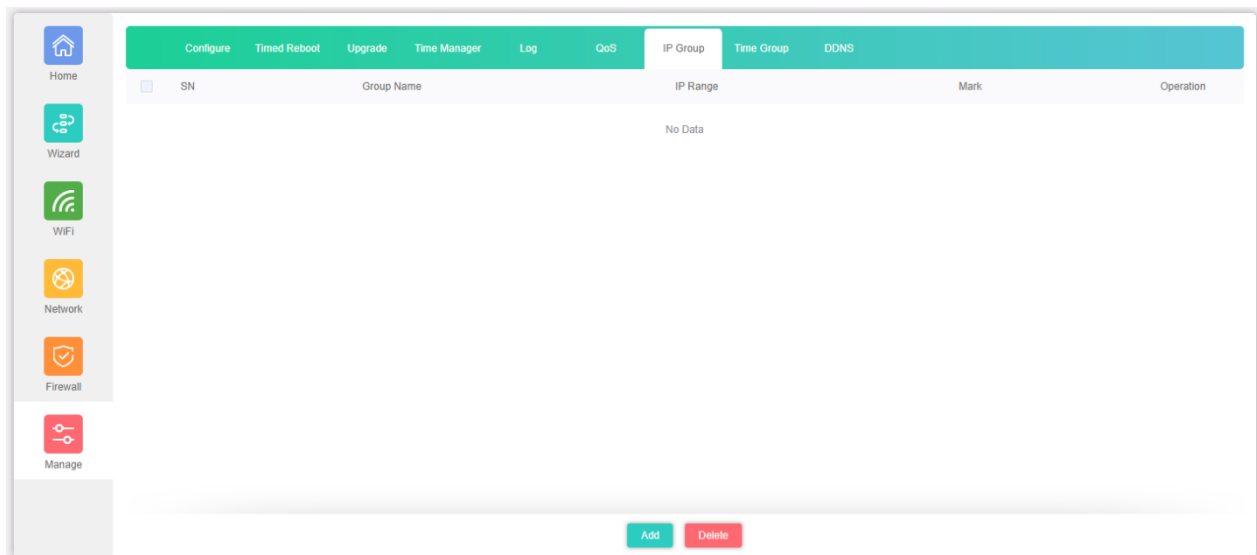

IP Group

Group Name

IP Range

-

Scan

Mark

Add a maximum of 16


Save

The page includes the following fields:

Object	Description
Group Name	Enter an IP group description
IPAddress Range	Enter an IP address range or use scan to select
Mark	Enter the mark string, or not
Save	Save the settings.

4.10.8Time Group (Gateway Mode only)

Time Group, Setup up a Time Group which can be used in the QoS as well as in the Firewall menu.
Click Add to open the Pop-up window to enter the IP information. To Delete a Time Group, select the Time Group which was made before and check mark it, then press Delete.

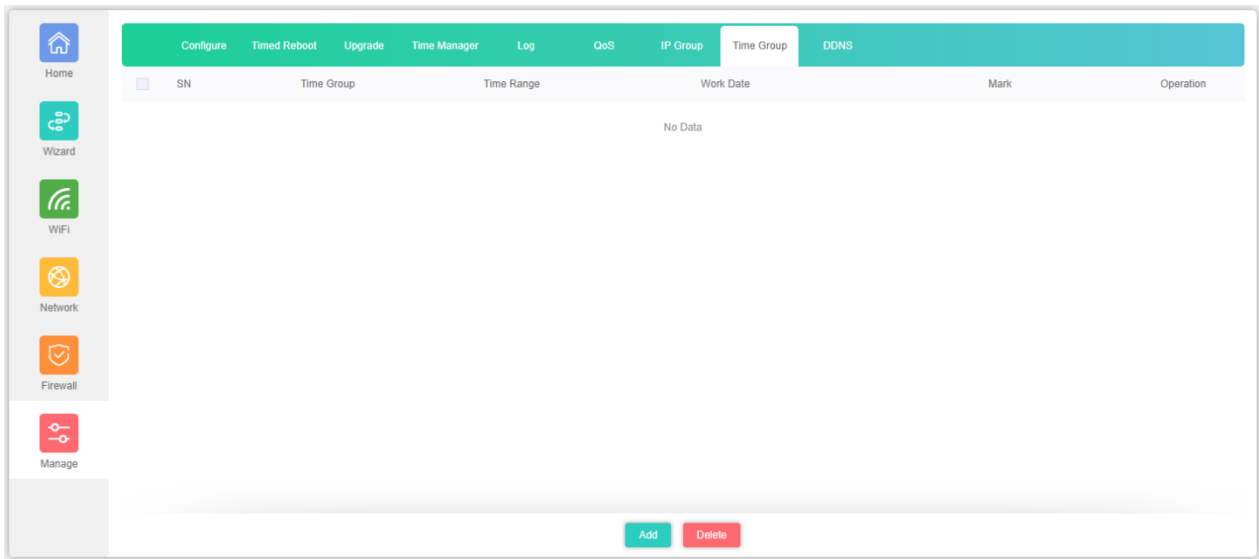

Time Group

Time Group

Time Range

00:00 - 00:00

Work Date

Custom

Mon.

Tue.

Wed.

Thu.

Fri.

Sat.

Sun.

Mark

Add a maximum of 16

Save

The page includes the following fields:

Object	Description
Time Group	Enter an time group description
Time Range	Select start time and end time for time range
Work Date	Select work day by option table
Mark	Enter the mark string, or not
Save	Save the settings.

4.10.9DDNS (Gateway Mode only)

A DDNS can be setup using the build in DDNS. To make an DDNS account please click on Registration.

Note: the DDNS service is not related to AirLive Technology Corp, but a third party.

The page includes the following fields:

Object	Description
DDNS	Select ON (Green) or OFF (Gray) to enable or disable DDNS
User Name	Enter user account for the DDNS.
Password	Enter password for the DDNS
Public IP	Public IP address is necessary for WAN IP
Domain	Enter unique domain name for device.
User Type	DDNS User Type.
Link Status	DDNS Link Status
No Account Registration Forget Password	Follow the link to Oray to register a DDNS account.

5 FIT Mode

The main function of FIT Mode is to work with the AirLive Wireless Controller WLAN-64/128GM. When the CPE is connected to the Wireless Controller, it will receive an IP Address from the Wireless Controller and the functions like SSID, Encryption and Channel are controlled via the Wireless Controller.

The page includes the following fields:

Object	Description
Information	Show the current network settings of the CPE
Position Settings	You can enter the device description.
Settings	Select DHCP or Static IP
IP Address	Enter the IP Address
Subnet	Enter Subnet Mask
Default Gateway	Enter the Gateway address
AC Address	Enter the AC Controller IP Address
Telnet	Enabling Telnet could be hacked, Use it carefully! Default is disable)
Apply	Apply the Settings
Reset Default	Restore the factory default settings, please press this button
Device Reboot	Reboot the CPE
Upgrade	Press to upgrade the firmware